

**AN INJURY TO ONE
IS AN INJURY TO ALL**



ON-SITE GUIDE

MANAGING RISKS IN STEVEDORING

Code of Practice

The content of this publication should be used as a general guide only. The Guide is not intended to be an authority or legal advice to be used in legal action.

This publication is not a substitute for independent professional advice and users should obtain appropriate professional advice relevant to their particular circumstances or workplace dispute.

The *Managing Risks in Stevedoring Code of Practice* (December 2016) publication remains the property and copyright of Safe Work Australia.



Maritime Union of Australia
365 Sussex Street, Sydney, NSW 2000
02 9264 5024

HOW TO USE THIS GUIDE

This is a Maritime Union of Australia guide to the Code of Practice: *Managing Risks in Stevedoring*. This document has been referred to as the National Stevedoring Code of Practice (NSCOP) in the campaign waged by maritime workers to secure better standards of safety for wharfies on the job. On the back of sacrifices by too many of our comrades we now have this document in place which is a guide to safety in the stevedoring industry.

The code however is not a be all and end all document. There are 11 codes of practice that apply to waterside workers in various roles that they undertake in their daily duties. We must be conscious also of the various layers of safety legislation, codes and guidance that are available to us for use on the job. We must use all of these tools in the struggle to make sure we come home alive.

Safety must be our responsibility despite the legal obligations on employers who can tend to shift their vigilance dependent on the capacity to meet a deadline or make a profit. Part of the struggle is ensuring that employers are kept to their obligations under law. This requires

organisation and a solid unity between the safety representatives and union delegates and their committees. Together we are so much stronger and form the basis of the union team in the workplace.

This guide will make commentary on each section of the code, outlining a history, reasoning and intent where there may be possible ambiguities. Not all sections have references.

The code was a result of struggle and action. It must continue to be used in this manner. It is our weapon in the battle to survive a dangerous industry which can destroy each and every one of us and our families. Vigilance on safety is our only path.

Every safety issue is a collective issue.

Warren Smith

Assistant National Secretary
Maritime Union of Australia

Each section of this guide relates directly to the headings contained within the Code of Practice: *Managing Risks in Stevedoring*.

Each left hand page shows the original section of the Code of Practice document



Each right hand page includes clear information from the MUA that will help you understand each section of the Code. This is not legal advice and should only be used as reference.

FOREWORD

- [Code of Practice: Managing noise and preventing hearing loss at work](#)
- [Code of Practice: Managing the work environment and facilities](#)
- [Code of Practice: First aid in the workplace](#)
- [Code of Practice: Managing risks of plant in the workplace](#)
- [Code of Practice: Managing risks of hazardous chemicals in the workplace](#)
- [Code of Practice: Managing electrical risks at the workplace](#)

The International Labour Organisation (ILO) [Code of Practice: Safety and Health in Ports](#), provides detailed information on port operations. It may be used as guidance to assist duty holders understand risks in stevedoring operations and how these risks can be managed.

HOW TO USE THIS CODE OF PRACTICE

In providing guidance, the word 'should' is used in this Code to indicate a recommended course of action, while 'may' is used to indicate an optional course of action.

This Code also includes various references to provisions of the WHS Act and Regulations to provide context with legal requirements. These references are not exhaustive. The words 'must', 'requires' or 'mandatory' indicate legal requirements exist which must be complied with.


FOREWORD

To be noted here is the listing of other relevant codes of practice that apply to waterside workers as well as Code of Practice: *Managing Risks in Stevedoring*.

- Code of Practice: *How to manage work health and safety risks*
- Code of Practice: *Work health and safety consultation, co-operation and co-ordination*
- Code of Practice: *Hazardous manual tasks*
- Code of Practice: *Managing the risk of falls at workplaces*
- Code of Practice: *Managing noise and preventing hearing loss at work*
- Code of Practice: *Managing the work environment and facilities*
- Code of Practice: *First aid in the workplace*
- Code of Practice: *Managing risks of plant in the workplace*
- Code of Practice: *Managing risks of hazardous chemicals in the workplace*
- Code of Practice: *Managing electrical risks at the workplace*

Other guidance material can also include manufacturers information guides

- Codes of practice can be called up if they have higher standards or the legislation is silent

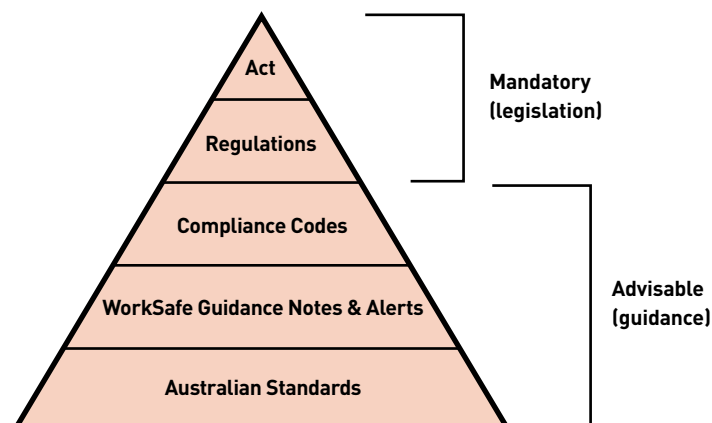

The Act provides for administration and enforcement of WHS by placing certain duties on PCBUs, workers, self-employed persons, manufacturers, designers, importers and suppliers.

Regulations spell out any specific requirements of the legislation. They may prescribe minimum standards and have a general application or they may define requirements related to a particular hazard or particular type of work. They may also be for the licensing or granting of approvals, etc. Regulations may be performance-based (achieve this!), process-based (carry this out in this way to achieve health and safety), or prescriptive (do this with a view to achieving health and safety).

Codes of practice and guidance notes - The Act and Regulations are supported by non-statutory codes of practice and other guidance material. Codes of practice provide advice on how to meet the duty of care. It is essential to identify all relevant codes and guidance material relevant to hazards in the organisation of interest as while they are not legislatively mandated they can be used to provide evidence of compliance with the legislation.

Standards the regulations may rely on standards to provide further details on the requirements. Such standards are produced by Standards Australia or jointly by Standards Australia and Standards New Zealand or by Safe Work Australia. If a standard is specifically referenced in the regulations then it forms part of WHS law.

1. INTRODUCTION

1.1 What is stevedoring?

Stevedoring involves all activities directly connected with:

- loading or unloading of vessel cargo
- stacking and storing on the wharf, and
- receiving and delivering cargo within the terminal or facility.

Stevedoring operations are diverse, comprising container terminals, bulk and general stevedoring facilities. The following table provides examples of the different type of stevedoring operations.

Table 1 Different types of stevedoring operations

Stevedoring operations	Details
Containers	Loading and unloading of container cargo.
Roll on/roll off (RoRo)	Loading and unloading of cargo via ramp to vessel e.g. cars and bulldozers.
Pure car carriers (PCC)	Loading and unloading of cars only.
Break bulk	Loading and unloading of non-containerised cargo transported as individual pieces due to it being oversized and overweight e.g. construction equipment, oil and gas equipment, wind towers and steel
Bulk	A product not separately packaged but rather is loaded in bulk onto a ship e.g. grain, liquids, iron ore and coal.
Passenger vessels	Primary function is to carry passengers.

A list of key terms used in this Code is in Appendix A.

1.2 Who has health and safety duties for stevedoring?

Everyone involved in stevedoring operations has health and safety duties when carrying out the work.

A person conducting a business or undertaking (PCBU) has the primary duty under the WHS Act to ensure, so far as is reasonably practicable, that workers and other people are not exposed to health and safety risks arising from the business or undertaking. This duty includes providing and maintaining a work environment that is without risks to health and safety. In stevedoring this duty means that a PCBU must eliminate risks arising from stevedoring, or if that is not reasonably practicable, minimise the risks so far as is reasonably practicable.

In addition to the primary duty of care, the WHS Regulations include specific requirements to manage risks in areas relevant to stevedoring operations including noise, hazardous manual tasks, falls, hazardous chemicals and plant.

Duty holders include those who operate a business involved in stevedoring operations and those who have management or control of a workplace where stevedoring operations are carried out, for example ship owners and port authorities.



1. INTRODUCTION

1.1 What is stevedoring?

The breadth of the stevedoring industry is outlined in this section. All Australian wharves are covered by this code. Port Authority workers carrying out stevedoring functions are also covered by this code for performance of that work.

**SAFETY IS UNION
BUSINESS**

1.2 Who has health and safety duties for stevedoring?

This section refers to workplace health and safety laws where the person conducting a business or undertaking (PCBU) has the primary duty under the WHS Act to ensure, so far as is reasonably practicable, that workers and other people are not exposed to health and safety risks arising from the business or undertaking.

Workers must be vigilant in protecting themselves. Laws that apply to employers are not always adhered to as the tragic number of national workplace deaths indicates.

Every safety issue is a collective issue and an opportunity to better organise your workplace.

Subcontractors on site are also PCBU's, ultimately they must comply with principal PCBU. This has application for site maintenance etc.

1. INTRODUCTION

Designers, manufacturers, importers, suppliers and installers of plant or structures used in stevedoring operations must ensure, so far as is reasonably practicable, that the plant or structure is designed, manufactured, imported, supplied or installed without risks to health and safety.

Further guidance is available in the [*Guide: Safe design, manufacture, import and supply of plant*](#).

Officers, including company directors, have a duty to exercise due diligence to ensure the business or undertaking complies with the WHS Act and Regulations. This includes taking reasonable steps to ensure the business or undertaking has and uses appropriate resources and processes to eliminate or minimise risks arising from stevedoring operations.

Workers have a duty to take reasonable care for their own health and safety and must not adversely affect the health and safety of other persons. Workers must comply with any reasonable instruction and co-operate with any reasonable policy or procedure relating to health and safety at the workplace. If personal protective equipment (PPE) is provided by the business or undertaking, workers must use it in accordance with the information, instruction and training provided.

Other people at the workplace including visitors must take reasonable care for their own health and safety and must not adversely affect the health and safety of others. They must comply, so far as they are reasonably able, with any reasonable instruction given by the PCBU to allow that person to comply with the WHS Act.

1.3 What is required to manage risks associated with stevedoring operations?

The WHS Regulations require a PCBU to manage risks associated with specific hazards including noise, hazardous manual tasks, falls, confined spaces, plant and electricity.

Section 2 provides guidance on how to manage the risks associated with stevedoring operations by following a systematic process involving:

- identifying hazards
- if necessary, assessing the risks associated with these hazards
- implementing and maintaining risk control measures, and
- reviewing risk control measures.

Further guidance on the general risk management process is in the [*Code of Practice: How to manage work health and safety risks*](#).



1.3 What is required to manage risks associated with stevedoring operations?

While the reference to the hierarchy of controls in this section is an agreed part of safety process it should not be highlighted as the main requirement in managing stevedoring risk.

The main requirement for workers and the thing that keeps us alive is a functioning collective. This means not only a WHS committee that meets and acts, but a committee that is truly representative of the workforce that understands that the safety collective and the industrial collective are not separate entities but one and the same thing.

Safety is industrial, a fact that cannot be argued when put in the context of whether we actually come home or not.

The role and numbers of HSRs is also a vital aspect to the effectiveness of a safety system within a workplace.

Delegates, union committee members, WHS committee members and HSRs must work as one. This is the union team and it is the best arrangement for protecting the workers through ensuring a safe job and safe work practices. Safety must be a collective and representative effort.

WHS committees are not rubber stamps for the boss. WHS committees often become flash points of struggle as the consistent habits of employers to put off big and possibly costly changes to safety systems are often resisted.

Consultation does not mean agreement. That said, if after consultation a safety issue cannot be resolved, it is in dispute. There is a dispute procedure for resolving WHS issues in the relative state regulations. This dispute procedure is not to be confused with industrial dispute procedure in EBA's. If no resolution can be found and the State regulator is required to make a ruling, it is imperative that the regulator can see full and detailed records of any meetings regarding this issue. There is a template at the back of the code to assist HSR's and Safety Committees.

Make sure every issue is recorded at safety committee meetings.

Numbers at safety meeting: no more employers than employees (not a democratic meeting, just stops meeting being hijacked).

Also refer to the MUA Record of Consultation Booklet that has been distributed with this guide.

- Consultation is not a shift manager / supervisor putting a new procedure on the table at the toolbox talk and requiring the workforce to sign before starting work.
- Consultation is not just being told by a manager how a new procedure will be implemented, it is actually being consulted about the procedure from the very start of the process through to implementation and review.

1. INTRODUCTION

CONSULTING WORKERS

Section 47

A PCBU must consult, so far as is reasonably practicable, with workers who carry out work for them who are (or are likely to be) directly affected by a work health and safety matter.

Section 48

If workers are represented by a health and safety representative, the consultation must involve that representative.

Section 49

Consultation is required in relation to the following health and safety matters:

- when identifying hazards and assessing risks to health and safety arising from the work carried out or to be carried out by the business or undertaking;
- when making decisions about ways to eliminate or minimise those risks;
- when making decisions about the adequacy of facilities for the welfare of workers;
- when proposing changes that may affect the health or safety of workers;
- when making decisions about the procedures for:
 - consulting with workers
 - resolving work health or safety issues at the workplace
 - monitoring the health of workers
 - monitoring the conditions at any workplace under the management or control of the person conducting the business or undertaking, or
 - providing information and training for workers
- when carrying out any other activity prescribed by the regulations for the purposes of this section.

Consultation involves sharing of information, giving workers a reasonable opportunity to express views and taking those views into account before making decisions on health and safety matters.


Workers are entitled to take part in consultation arrangements and to be represented on work health and safety matters by a health and safety representative who has been elected to represent their work group.

In deciding how to control risks, you must consult with workers who will be affected by this decision, either directly or through their health and safety representative. Their experience may help you identify hazards and choose practical and effective control measures.

Consultation may occur through:

- general or workplace induction processes
- toolbox talks
- WHS committee meetings
- participative risk assessment processes
- phone, email or fax, and
- sessions or events called for a specific purpose.

Toolbox talks can be used to provide information to and receive feedback from your workers as well as assist in raising the awareness of how stevedoring operations can be carried out in a safe and healthy manner. For example, toolbox talks may include discussions on:

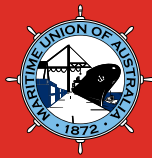

RECORD OF CONSULTATION NSW WHS ACT 2011

Date	HSR Name	PCBU/Employer Representative Name
Time	Workgroup	PCBU/Employer Representative Title

Who was present at the meeting?

--

☐ I received all the information prior to the meeting [please tick]

Issue	
<input type="checkbox"/> Section 19: failure to provide a healthy and safe workplace <input type="checkbox"/> Section 47: failure to consult <input type="checkbox"/> Other section: <input type="text"/>	Details

What is the proposed solution[s]?

HSR Proposed solution[s]	Employer Proposed solution[s]
Solution Agree <input type="checkbox"/> Yes <input type="checkbox"/> No	Solution Agree <input type="checkbox"/> Yes <input type="checkbox"/> No

What are the agreed next steps and timeframes?

--

☐ Pursuant to section 90(3) of the WHS Act, a copy of this record was given to the PCBU/Employer Rep named above as evidence of the consultation that was undertaken to attempt to resolve the health and safety issue.

☐ I hereby advise the PCBU/Employer representative that if the issue is not remedied, I may choose to exercise my right to issue a Provisional Improvement Notice under Section 90 of WHS Act

HSR Signature

Provisional Improvement Notice Section 90: A HSR must consult about the health and safety matter before issuing a Provisional Improvement Notice to a person [section 90(3)]. This record of consultation is useful for that purpose.



WHITE - HSR | BLUE - Safety Committee | PINK - PCBU

*This form is an example from NSW. Please use the right form for your State or Territory.

1. INTRODUCTION

- changes to the work environment that may impact on health and safety
- safe working instructions for particular tasks, and
- recent incidents including 'near misses' and key lessons to prevent a reoccurrence.

When using toolbox talks it is good practice to:

- keep a written record of the topic covered, attendees and feedback received
- organise a program of toolbox talks to ensure workers are given sufficient opportunity to provide input into how risks should be controlled, and
- review the effectiveness of toolbox talks and the level of worker understanding in the discussions.

CONSULTING, CO-OPERATING AND CO-ORDINATING ACTIVITIES WITH OTHER DUTY HOLDERS

Section 46

The WHS Act requires that where more than one person has a duty in relation to the same matter, each person with the duty must, so far as is reasonably practicable, consult, co-operate and co-ordinate activities with all other persons who have a work health and safety duty in relation to the same matter.

Stevedoring operations can involve more than one business or undertaking, each with health and safety duties. Duty holders are required to consult, co-operate and co-ordinate activities with each other. Duty holders should exchange information on planned activities and consider who is best placed to minimise or eliminate the risks.

The outcome of consulting, co-operating and co-ordinating activities with other duty holders is each duty holder understands how their activities may impact on health and safety and the actions they each take to control risks are complementary.

For example, pre-planning is completed before a vessel arriving at a terminal or facility. The stevedoring company may provide safety information and vessel inspection checklists to the ship before undertaking stevedoring operations. This gives the vessel master or their nominated representative an opportunity to co-operate with the stevedoring company to ensure the area of work is safe for the stevedores to work in and provide stevedores with information regarding safe work procedures for the ship. The stevedoring company conducts a vessel inspection upon the ship's arrival. Any safety issues are communicated to the vessel master or officer in charge. In the case of any outstanding issues, the stevedoring company or their nominated representative may meet and work with the vessel master or its nominated representative to try and resolve the issue. If the issues remain unresolved, then the stevedoring company contacts local agent or the shipping line or vessel operator to try and resolve the issue.

Further guidance on consultation is in the [*Code of Practice: Work health and safety consultation, co-operation and co-ordination*](#).

1.4 Information, training, instruction and supervision

Section 19

The WHS Act requires a PCBU to provide relevant information, instruction, training and supervision necessary to protect all persons from risks to their health and safety arising from work carried out.

PROVISION OF INFORMATION TO WORKERS

The information provided to workers including contractors undertaking stevedoring operations should include:

- results of any relevant risk assessment
- information on relevant safe work procedures, and
- manufacturer's instructions on the safe use of plant and equipment where available.

Procedures should be in place so all workers including contractors and sub-contractors are informed of the hazards and risks involved in the activities they are about to carry out, in particular at the change of shift.

TRAINING

Training in work health and safety helps to provide workers with the knowledge and skills to perform work activities safely and to identify hazards. Training should be provided to all workers undertaking work on the site including contractors, particularly as they may be unfamiliar with the working environment, organisational policies and work procedures.

Training delivery plan

Workers must be consulted when making decisions about the procedures for providing work health and safety information and training. A training delivery plan may assist with the consultation process, with identification of knowledge and skills needed and timely delivery of training to address skills gaps.

If developed, a training plan should address who is to be trained, particular competencies needed, how the training will be delivered and the measures used to ensure workers have developed the necessary skills or competencies.

Training topics

Training should be provided by a competent person. The content and methods of presenting training material should be tailored to meet the specific needs of each group. Stevedoring specific training should be relevant to the work being carried out and include:

- the work health and safety duties of everyone involved in stevedoring operations
- the nature and extent of stevedoring hazards and risks including risk associated with the dynamic nature of the work
- hazard and incident reporting systems
- systems for reporting defects in plant or equipment used for stevedoring operations
- consultation arrangements
- safety documents, policies, procedures and plans
- safe work procedures including instruction on:
 - specific cargo management
 - use of communication systems
 - operation of vehicles, other types of plant and associated equipment
 - emergency and first aid procedures
 - when and how to use PPE including the selection, fitting, proper care and maintenance of PPE
 - other control measures

1. INTRODUCTION

- accessing health and safety information, and
- access, egress and security.

Workplace specific training may be delivered in a variety of ways including:

- toolbox talks
- pre-start meetings
- on-the-job training
- one-off sessions or events for a specific purpose, and
- training courses.

Training records

Training records should be kept to assist a PCBU check what training has been provided, what extra training is needed and to demonstrate compliance with WHS legislative requirements.

Training records may include training needs analysis documents, training plans, workers who have successfully completed training programs and the dates of completion, details of competency-based training completed, and copies of licences, certificates or other qualifications.

Review of training

Training should be reviewed and where necessary updated to reflect changes associated with the nature of hazards and risks, changes to work practices or risk control measures.

Reviewing training is important in stevedoring where the workforce may change frequently and may only be employed for short periods.

SUPERVISION

In addition to ensuring workers receive appropriate training, adequate supervision must also be provided to ensure workers, including contractors, can carry out their tasks safely. Supervisors should have the information, training and authority to competently direct and control their team's work and ensure work is done safely.

The level of supervision will depend on the nature of the hazards and risks, the experience and competence of workers and the effectiveness of existing risk control measures. High-risk or complex activities may have greater supervision requirements.

New starters or others with special needs may require more direct supervision and ongoing instructions until they can demonstrate they have the skills to perform the work safely.

LICENCES

Some work activities, like dogging, rigging, the operation of reach stackers, forklifts and some types of cranes, require workers to hold a relevant high risk work licence under the WHS Regulations. The licence is issued by the regulator.

Regulation 85

A PCBU must not direct or allow a worker to carry out high risk work for which a licence is required unless the person sees written evidence provided by the worker that the worker has the relevant licence for that work, or is undertaking a course of training for the licence, or has applied for the relevant licence and is awaiting a decision on that application.



HSR training

Approved work health and safety training providers help health and safety representatives (HSRs) to understand and fulfil their role and functions.

HSRs are entitled to choose and attend, in consultation with the business or employer (or other PCBU), a SafeWork approved five day training course in work health and safety. one day refresher course each year during their term of office.

WHS committee member training

There is a one-day WHS Committee Member course which should be completed by any person who is not a trained HSR but sits on the WHS Committee.

HSR refresher training

HSR's are entitled to a one-day refresher course each year during their term of office

High risk licences

High risk work licences

A high-risk work licence is required for certain types of work. This includes, scaffolding, dogging and rigging and operating cranes, hoists, reach stackers, forklifts and pressure equipment.

MUST DO'S

There are specific laws about doing high risk work safely.

There are also general work health and safety laws that will apply to you in any situation, including when doing high risk work.

Hold a licence

You must hold a licence to do high risk work with:

- **cranes**
- **dogging, rigging and scaffolding**
- **forklifts**
- **hoists**
- **pressure equipment**
- **reach stacker**

You must also keep your licence available for inspection.

High risk work licences are valid for five years and recognised nationally: you can work in any state or territory if you have a current HRW licence.

Getting a new licence

You will need to be trained and assessed by a registered training organisations (RTOs) that is listed on the National Register of Vocational Education and Training (VET). The RTO must also have entered into an agreement with the state regulator.

2. RISK MANAGEMENT

Risk management is a systematic process to eliminate or minimise the potential for harm to people.

An example of the risk management process is at Appendix B.

2.1 Identifying the hazards

The first step in managing stevedoring risks is to find out what could potentially cause harm to people. This may be done by:

- inspecting the working environment and talking to workers about how work is carried out
- inspecting equipment and materials used during stevedoring
- reading product labels and manufacturer's instruction manuals
- talking to manufacturers, suppliers, industry associations and health and safety specialists, and
- reviewing reports of incidents, injuries and dangerous occurrences.

Table 2 lists common hazards found in stevedoring workplaces, examples of when they could occur and the potential harm they can cause. Health and safety duties require a duty holder to consider all risks associated with work, not only those mentioned in this Code.

Table 2: Hazards associated with stevedoring operations

Hazard	Examples of tasks	Potential harm
Hazardous manual tasks	Lashing and unlashings Fitting or removing twist locks Working above shoulder height	Strains and sprains Cuts and abrasions
Working at height	Working near an open hatch Accessing cargo Climbing ladders	Falls causing disabling injury or fatality
Working in restricted or enclosed spaces	Working in holds Working in between cargo	Crush injuries Respiratory conditions Fatalities
Falling objects	Working with suspended cargo or unsecured loads	Crush injuries Fractures Fatalities
Plant and equipment	Working in and around mobile plant e.g. straddle carriers, internal transfer vehicles (ITVs), reach stackers, rubber tyred gantries (RTGs) and forklifts damaged or poorly maintained equipment like damaged ladders, electrical cables, ropes, stretched chains and defective hooks	Crush injuries Disabling injuries Fatalities



2. RISK MANAGEMENT

2.1 Identifying the hazards

This section is broadly about identifying any risks that may befall wharfies in their work. The table is non-specific but a guide. We must be vigilant to ensure that we are considering and thinking about risks that may occur on the job and how we plan to deal with them.

- **Make sure the HSR or delegate is involved in risk assessments.**
- **Get your Union involved if required. IT IS YOUR RIGHT.**
- **NEVER tick off on a risk assessment you are not happy with.**
- **Get expert advice if required.**
- **Watch out for workmates.**
- **Look after each other.**
- **We drive safety, not bosses.**

WHAT THE CODE SAYS

MANAGING RISKS IN STEVEDORING | Code of Practice

2. RISK MANAGEMENT

Hazard	Examples of tasks	Potential harm
Working environment	Working in extreme weather conditions Working in holds and on deck Working near refrigerated containers	Sunburn and skin cancer Heat stress, strains and sprains due to slips and trips Fumes or atmospheric contaminants
Electricity	Lashing next to refrigerated containers Jump starting vehicles Isolating equipment	Electric shock Burns Fatalities (electrocution)
Stored energy	Pressurised liquids and gases Tensioned cable or ropes	Disabling injuries Fatalities
Noise	Using noisy machinery or power tools	Hearing loss
Hazardous chemicals including dangerous goods	Loading and unloading hazardous cargo Exposure to chemicals used to fumigate ship's holds	Respiratory conditions Burns Skin conditions Fatalities
Fire	Hot works e.g. welding or oxy-cutting Handling combustible cargo	Burns Smoke inhalation Fatalities
Lighting	Working in inadequate light for instance in holds or at night	Slips, trips and falls
Failure to follow safety procedures	Using incorrect lifting gear Not verifying safe working load Not checking service history where required	Crush injuries Fatalities

A number of hazards may co-exist in the workplace, for example stevedoring operations may involve being near moving parts and performing hazardous manual tasks in the presence of high noise levels.

Hazards may also change as work is carried out, for example entries and exits may become blocked preventing escape in emergencies.

Eliminating health and safety risks

The model WHS Act and Regulations require those who have a duty to ensure health and safety, achieve it by eliminating health and safety risks, so far as is reasonably practicable.

Key terms

- **Hazard** refers to a situation or thing that has the potential to harm a person. Hazards at work may include noisy machinery, a moving forklift, chemicals, electricity, working at heights, a repetitive job, bullying and violence at the workplace.
- **Risk** is the possibility that harm (death, injury or illness) might occur when exposed to a hazard.
- **Risk control** means taking action to eliminate health and safety risks so far as is reasonably practicable, and if that is not possible, minimising them so far as is reasonably practicable. Eliminating a hazard will also eliminate any risks associated with that hazard.

SAFETY SIGNS



2. RISK MANAGEMENT

2.2 Assessing the risks

A risk assessment involves considering what could happen if someone was exposed to a hazard—the consequence—and the likelihood of this happening. A risk assessment can help you determine:

- if there is further action you should take to control the risk, and
- how urgently the action needs to be taken.

If you already know the risk and how to control it effectively, a risk assessment may be unnecessary. However, if circumstances or conditions change then the risk needs to be re-assessed.

Factors to consider when assessing risks from stevedoring operations include:

- the type of work being performed
- how many people are exposed
- communication methods and effectiveness
- the suitability of vehicles and equipment for the activity e.g. ropes and lifting gear
- time of day and hours of work
- the training, experience and competence of workers
- the work environment, and
- fatigue management.

2.3 Controlling the risks

The ways of controlling work health and safety risks are ranked from the highest level of protection and reliability to the lowest. This ranking is known as the *hierarchy of risk control*. The highest level and most effective control is elimination where the hazard is completely removed. You must always aim to eliminate a hazard. If this is not reasonably practicable, you must minimise the risk by working through the other alternatives in the hierarchy.

Table 3 The hierarchy of control measures

Level	Control
Level 1	<p>Elimination – the most effective control measure is to remove the hazard or hazardous work practice. For example, eliminate the need for workers to carry out work at heights by replacing manual twist locks with automatic twist locks.</p> <p>If elimination is not reasonably practicable, you must minimise the risk by following the control measures in the hierarchy below.</p>
Level 2	<p>Substitution – substitute the work practice or equipment with something safer. For example, substitute a hazardous chemical with a less hazardous chemical.</p>
	<p>Isolation – physically separate the source of harm from people by distance or by using barriers. For example, use physical barriers to separate pedestrians from mobile plant.</p>



2.2 Assessing the risks

You have the right to do a risk assessment when you see fit. This is your right and one you must exercise to ensure a safe job.

Factors to consider in conducting a risk assessment are contained in this section.

Don't be rushed or bullied when assessing risks.

2.3 Controlling the risks

Every worker has the right to cease work that exposes them to an imminent or immediate risk to their health and safety. Once you have ceased work all you must do is be ready to perform other safe duties and you are covered for your actions as per the WHS Act.

This section outlines the hierarchy of controls used in dealing with workplace risks. We should always strive to have the most effective tier of this system used in dealing with problems. We should reject the immediate response of handing out PPE to deal with issues and risks that really do require a greater degree of attention and elimination, not just avoidance.

You are not required to undertake work that is unsafe and a risk to your health and safety. In your working life, it is almost guaranteed that an employer or their representative will instruct you to perform work that is unsafe. You have the right to refuse and you must do so. This must be reported immediately to your HSR or delegate so they can plan the appropriate collective response.

Start from elimination and work from highest control down not the other way around.

IF IT'S UNSAFE - STOP!

2. RISK MANAGEMENT

	Engineering controls – are physical control measures including mechanical devices or processes. For example, install guards on conveyor systems or speed limiters on forklifts.
Level 3	Administrative controls – if a risk remains, it must be minimised with administrative controls like training workers to use safe work procedures, using warning signs or arranging work to minimise the time spent near noisy machinery. PPE – any remaining risk must be minimised with suitable PPE, for example by providing workers with high visibility clothing, gloves, non-slip footwear, and hearing and eye protection.

Administrative control measures and PPE do not control the hazard at the source. They rely on human behaviour and should only be used:

- when there are no other practical control measures available—so as a last resort
- as an interim measure until a more effective way of controlling the risk can be used, and
- to supplement higher level control measures—as a back-up.

In many cases a combination of control measures provides the best solution.

When selecting and implementing a combination of control measures it is important to consider whether new risks might be introduced as a result and, if so, whether the combination of the control measures should be reviewed.

2.4 Maintaining and reviewing control measures

Regulation 37

Control measures must be maintained so that they continue to protect workers and other people from the hazards associated with plant. The control measures must be:

- fit for purpose
- suitable for the nature and duration of the work, and
- installed, set up and used correctly.


Regulation 38

A PCBU must review and as necessary revise control measures:

- when the control measure is not effective in controlling the risk
- before a change at the workplace that is likely to give rise to a new or different health and safety risk that the control measure may not effectively control
- if a new hazard or risk is identified
- if the results of consultation indicate that a review is necessary, and
- if a health and safety representative requests a review.

Reviewing the hazard and the risk controls is an important part of the risk management process. The aim is to ensure:

- the implemented controls are effective and working
- there are no risks previously not identified

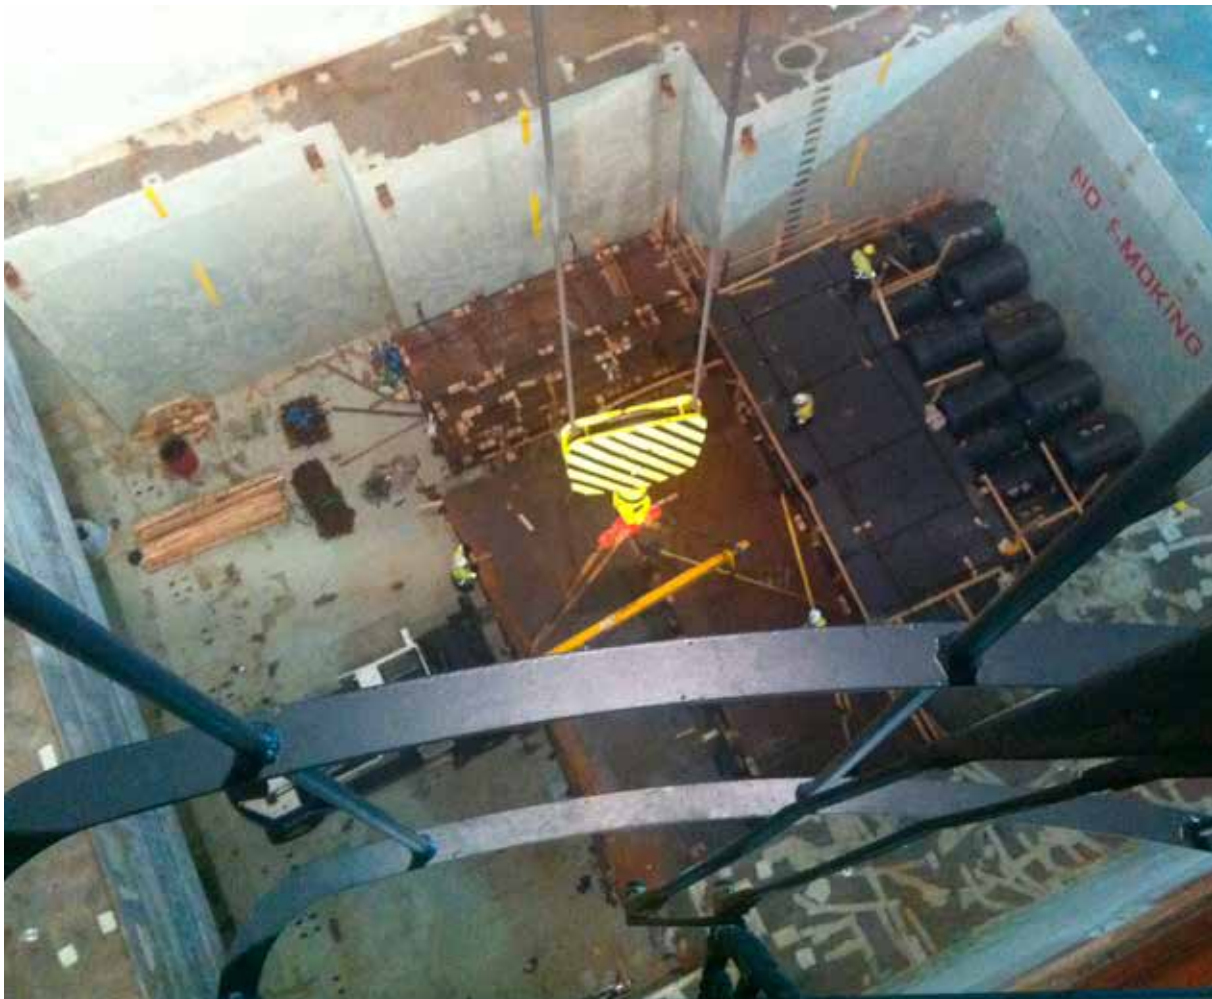

2.4 Maintaining and reviewing control measures

Particular note should be taken of the WHS Regulations about control measures. They are identified in the code.

We must ensure that time and opportunity for reviewing control measures is allowed for HSR and safety representatives. The review should not be a one-sided process but fully involve the workplace representatives and be reported back in full to the rank and file.

- **If the job changes so might the control measure.**
- **In a dynamic workplace, the control measure needs regular review.**
- **Workers' representatives should be a part of the review.**

2. RISK MANAGEMENT

- circumstances or practices have not changed that have introduced other hazards, and
- opportunities may now exist to manage the risk with a higher level of control.

A review can be done by using the same methods as the initial hazard identification process. Common methods include workplace inspection, consultation, and testing and analysing records and data. Reviewing the control measures also involves considering whether a higher order control measure is now reasonably practicable.

You should consult your workers and health and safety representatives as part of the review process and consider the following questions:

- Are all foreseeable hazards being identified?
- Are the control measures working effectively in both their design and operation?
- Have the control measures introduced new problems?
- Has instruction and training provided to workers been successful?
- Is the frequency and severity of health and safety incidents reducing over time?
- If new legislation or new information has become available, does it indicate the current controls may no longer be the most effective?
- Have changes occurred affecting health and safety, for example has new plant or equipment been introduced? Are new procedures required?

If areas are identified for a change or improvement, review your information and make further decisions about risk control.

3. PLANNING

3.1 Pre-arrival planning

Stevedoring operations should be planned before the cargo arrives to identify potential hazards, assess risks and determine appropriate control measures in consultation with relevant parties. This may include the port authority, shipping agents or companies, transport companies and other duty holders in the supply chain.

In the planning stage you should consider:

- load and discharge sequences—the order of work
- pre-work inspections
- vessel type, cargo type e.g. heavy lifts and presentation
- the length of time required to do the work
- allocation of resources e.g. people, plant and skills, and
- weather conditions, time of day, tide levels and surge impact.

3.2 Emergency planning

EMERGENCY PLANS

Regulation 43

A PCBU must ensure that an emergency plan is prepared for the workplace that provides for:

- emergency procedures, including:
 - an effective response to an emergency
 - evacuation procedures
 - notification of emergency services at the earliest opportunity
 - medical treatment and assistance; and
 - effective communication between the person authorised by the person conducting the business or undertaking to co-ordinate the emergency response and all persons at the workplace.
- testing of the emergency procedures, including how often they should be tested, and
- information, training and instruction to relevant workers in relation to implementing the emergency procedures.

Emergency plans should be site-specific, covered in induction training and made known to visitors.

Ship emergency plans affecting stevedoring operations should be checked during the vessel inspection and followed in an emergency. Assembly points where people can safely go in an emergency should be identified during the inspection.

Shore emergency plans should include:

- allocation of roles and responsibilities for specific actions in an emergency to people with appropriate skills, for example appointment of area wardens
- access and exit for retrieval and escape including a contingency plan for alternative access and exit



3. PLANNING

3.1 Pre-arrival planning

Ensure the factors identified in the code and any other relevant local matters are included in the planning of work on any vessel or land-side location.

Workforce participation and understanding is key to this process. HSRs, safety representatives and delegates must be made aware and agree on the process for workforce inclusion into pre-arrival planning of work.

- **Have you reviewed your boss's emergency plans? If not do so.**
- **Make sure any emergency plan is real and will work..**

3.2 Emergency planning

Ensure all regulations and scenarios in the workplace are catered for in emergency planning consistent with the provisions of the WHS Regulations [Reg 43].

This section also includes reference to Regulation 42 dealing with first aid requirements. These are, unfortunately, very basic requirements and should be a point of ongoing demand and struggle where improvements could be made.

It is vital to establish effective communications and the best possible means to extricate workers from catastrophic situations. We must know and understand the response times from the various forms of emergency services and fully understand our on-site capacity to assist injured or trapped workers.

Unacceptable response times must be dealt with and a rescue plan that provides assurances to the workforce is required.

Access to First Aid Training

It is recommended that defib and oxy-viva is made available particularly if emergency services are more than a few minutes away. Surviving a serious cardiac arrest is reduced by 10% every minute without a defib.

3. PLANNING

- safe and timely evacuation procedures e.g. evacuation checklists and procedures for assisting injured people
- warning systems and what to do when they activate
- shutting down of equipment e.g. cranes
- planning for drills e.g. to ensure alarms are audible to everyone
- fire risks and provision of firefighting and rescue equipment at appropriate locations
- the establishment of a reliable means of communication between workers to ensure effective evacuation of danger areas including a backup communication system in case of a failure of the primary system
- a readily accessible communication system to contact necessary emergency services
- the display of evacuation procedures in appropriate locations, and
- access for emergency services like ambulances.

Regular refresher training should be provided to workers and procedures established and maintained to ensure there is effective communication between ship—the vessel master—and shore—stevedores. Further information on emergency plans is in the [Code of Practice: Managing the work environment and facilities](#). See section 7.2.2 for information on emergency procedures for cranes.

FIRST AID ARRANGEMENTS

Regulation 42

A PCBU must:

- provide first aid equipment and ensure each worker at the workplace has access to the equipment
- ensure access to facilities for the administration of first aid, and
- ensure that an adequate number of workers are trained to administer first aid at the workplace or that workers have access to an adequate number of other people who have been trained to administer first aid.

First aid kits must be accessible at the workplace.

Further guidance on providing first aid and the contents of first aid kits is in the [Code of Practice: First aid in the workplace](#).

Emergency plan

An emergency plan must be prepared for each workplace where a crane will be operated. It must be tested in the workplace and include emergency procedures like effective response and evacuation, notifying emergency services and medical treatment. Emergency procedure training must be provided to workers.

Contact numbers for emergency services should be easily seen or found. Workers should know what system is in place to contact emergency services and how to use it.



4. INSPECTIONS

4.1 Vessel inspections

The vessel type and condition of its equipment and gear may impact on safety.

Before commencing stevedoring operations a vessel inspection should be carried out to identify potential risks for stevedoring operations. The condition of the work area should be assessed before starting work and then monitored throughout the loading and discharge process.

Some points to consider when conducting a vessel inspection include:

- working environment including access and egress
- cargo presentation, and
- condition of the ship's lifting equipment if it will be used during the work.

The use of checklists can assist in identifying hazards. Examples of checklists for container operations and bulk and general operations are provided at Appendix C and Appendix D.

Health and safety representatives and other personnel like the vessel master or their delegated representative may participate in vessel inspections.

Section 68(2)(a)

A health and safety representative may inspect the workplace or any area where work is carried out by a worker in the work group:

- at any time after giving reasonable notice to the person conducting the business or undertaking, and
- at any time without notice in the event of an incident or any situation involving a serious risk to health or safety emanating from an immediate or imminent exposure to a hazard.

Work procedures should support the implementation of inspections and ensure relevant follow-up actions are taken. There should be a process for dealing with unresolved issues.

ACCESS ON BOARD SHIPS

Access routes should be checked during the vessel inspection and any issues addressed in consultation with the vessel master.

Some points to check include:

- access routes are tidy, adequately illuminated and clear of obstructions
- hinged and pontoon hatch covers are secured to prevent them from accidentally closing during access
- there is sufficient space between containers to accommodate work being carried out safely, and
- there are two means of access where work will be carried out in a cargo space.

The ILO *Code of Practice: Safety and health in ports* provides detailed guidance on access on board ships.



4. INSPECTIONS

4.1 Vessel inspections

Ship inspections are one of the most important aspects of safety on the waterfront.

When a ship arrives, it must be inspected thoroughly to identify safety hazards - even if we have worked it many times before. The code provides a reasonable guide to undertaking the inspection. There is a checklist provided for in the code.

HSRs and delegates should be involved in these inspections. It is well recognised that worker involvement means better safety.

Your rights to inspect

Under Australian law, health and safety representatives have a legal right to inspect any part of the workplace, at any time, after giving reasonable notice.

Employers have a legal obligation to consult and involve workers

At the same time, employers are legally required to consult and involve workers, and their representatives, when identifying hazards and assessing risks.

This duty applies at every stage of the risk management process:

- **when inspecting the workplace to identify hazards;**
- **when assessing risks;**
- **when deciding what controls should be used;**
- **when implementing and reviewing those controls;**
- **whenever changes are proposed – such as manning levels or work processes – that may affect safety**
- **after a near miss or incident; and**
- **at any other relevant time**

Download template vessel inspection checklists from the MUA website

Don't reinvent the wheel. Download best practice examples of inspection checklists from the safety page on the MUA website www.mua.org.au/safety.

Report defective ships on the new MUA Vessel Deficiency Register

When you identify safety problems on a ship make a quick report in the MUA's new online ship deficiency register. It is easy to use, takes about 5 minutes and you can do it from your phone.

4. INSPECTIONS

WORKING AREA

The vessel inspection should check housekeeping practices on the vessel including:

- suitable storage areas for tools and equipment including lashing bars are identified and used
- loose items that may create a hazard from potential vessel movement are secured, and
- reefer cables have been secured before unloading to ensure no snagging of loose hanging cables.

Before lashing and unlashings, check for the following:

- equipment faults including any which may affect the integrity of the fall restraint safety system, for example jagged metal on railings or containers
- lashing gear is undamaged and in serviceable condition
- outboard cells are provided with safety rails sufficient to prevent a person falling overboard
- railing—top and mid-rail— is provided around open hatches and outboard cells including safety chains. Where rails are made of rope or wire ensure they are taut and in good condition, and
- electrical cables are stowed away from walkways wet areas, and power is disconnected in proximity to lashing activities.

CARGO PRESENTATION

Working conditions and circumstances may change significantly during transit. The inspection should check cargo in the work area has not moved during the voyage and that lashing is secure for cargo adjacent to the work area not being discharged. Identified changes in the condition of cargo should be rectified where reasonably practicable or communicated to relevant people in other ports.

4.2 Plant inspections

There are specific requirements under the WHS Regulations for the inspection of plant including cargo gear and cranes—see section 7.

Regulation 213

A person with management or control of plant at a workplace must ensure that maintenance, inspection, and if necessary testing, of plant is carried out by a competent person in accordance with manufacturer's recommendations, or if manufacturers' recommendations aren't available, in accordance with recommendations of a competent person. If it is not reasonably practicable to comply with the manufacturer's recommendations or the recommendations of a competent person, the inspection and testing must occur annually.

The inspection of plant should identify problems that may compromise its safe operation, for example wear and tear, corrosion and damaged parts.

Further information is available in the [*Code of Practice: Managing risks of plant in the workplace*](#).



Seven steps to a successful inspection

1. Make a formal request to be included in inspection.
2. Workforce should be aware of request. Get the support of your workmates. Request to be public.
3. Use a template vessel inspection checklist. Examples are available on the safety page of the MUA website www.mua.org.au/safety.
4. Report the outcomes of the inspection to workforce.
5. Inform supervisors of any safety shortcomings.
6. Trained HSRs can issue PIN notices. A PIN notice is a legally binding direction requiring an employer to fix a health and safety issue.
7. Depending on the breach, you can also report issues to AMSA and/or the health and safety regulator in your state.

What if the employer refuses to let HSRs participate in the inspection?

If the employer says you can't do the inspection, or says you have to do it in your own time, they may be breaching their duty to consult and involve workers. Remember, employers have a legal duty to consult and involve workers in identifying and managing risk.

Elected and trained health and safety reps can issue a 'PIN notice' for failure to consult. That will get their attention. Make sure you get support from your workmates first.

4.2 Plant Inspections

Note Regulation 213 of the WHS Inspections with regard to the upkeep of machinery and its operation within manufacturers' specifications.

Attention should be paid to the relevant **Code of Practice: Managing risks of plant in the workplace**

https://www.safeworkaustralia.gov.au/resources_publications/model-codes-of-practice for more detailed outlines on the upkeep of machines and plant and about managing machinery and plant on the job.

HSR's entitled to select their own training provider for initial course and ongoing refresher training.

Worker's Participation & Representation Guide SWA

<https://www.safeworkaustralia.gov.au/system/files/documents/1702/worker-representation-and-participation-guide-historical-10012012.pdf>

5. THE WORKING ENVIROMENT

Regulation 40

A PCBU must ensure, so far as is reasonably practicable, that:

- the layout of the workplace allows, and is maintained to allow, persons to enter and exit the workplace and move within it safely, both under normal working conditions and in an emergency
- work areas have space for work to be carried out safely
- floors and other surfaces are designed, installed and maintained to allow work to be carried out safely
- lighting enables each worker to carry out work safely, persons to move around safely and safe evacuation in an emergency
- ventilation enables workers to carry out their work without risk to their health and safety
- workers exposed to extremes of heat or cold are able to carry out work without risk to their health and safety, and
- work in relation to or near essential services (such as gas, electricity, water, sewerage and telecommunications) do not affect the health and safety of persons at the workplace.

Guidance on safe access and exit for shore operations is available in the [Code of Practice: Managing the work environment and facilities](#).

5.1 Gangways

Under Marine Order 21: [Safety of navigation and emergency procedures](#) the master of a ship in port must ensure there are safe means of access to the ship.

The means of access from the wharf to a vessel's deck may be provided by the vessel or the shore terminal. Gangways and walkways for access between the shore and the ship should be placed:

- so no loads pass over them
- where access to it won't be obstructed, and
- where it can't be struck by moving traffic on a crane track, railway track, or other route.

If this is not practical during stevedoring operations then the means of access should be supervised to ensure the above conditions are met while they are in use.

Gangways, walkways and hand rails should be in good condition and free from obstructions and residue build-up. They should remain rigged during loading and unloading.

5.2 Housekeeping

Housekeeping practices should be implemented to control risks on shore and on vessels. Designated storage areas should be provided for loose items, for example twist lock bins, to ensure these are correctly stored.

5. THE WORKING ENVIRONMENT

5.1 Gangways

- Do not use an unsafe or insecure gangway. Wait until it is fixed before using.
- Do not use a ships' gangway if it does not have a secured net in place.
- Do not start lashing on PCC or Ro-Ro vessels until the main ramp is down. The gangway is not an operational point of access or egress.
- Gangways are not safe if rested upon railings or on specific load bearing structures. Make sure the gangway is attached and secured correctly.
- Gangways (such as shore supplied brows or gangways) not be used at an angle of inclination greater than 30° from the horizontal; and
- Ships accommodation ladders should not be used at an angle greater than 55° from the horizontal.
- Don't access PCC or Ro-Ro until adequate ventilation is confirmed during start vessel inspection.

As per AMSA Guidance (Marine Notice 13/2014)



5.2 Housekeeping

See Code of Practice: *Managing the work environment and facilities*.

[https://www.safeworkaustralia.gov.au/resources_publications/model-codes-of-practice]

A vessel inductor needs to look at basic induction eg. assembly points, type of alarms, no go areas.

NOTES:

5. THE WORK ENVIRONMENT

Goods and materials not in containers or vehicles should be kept in stable and orderly stacks or piles on firm and level surfaces.

More information about housekeeping procedures on shore is in the [Code of Practice: Managing the work environment and facilities](#).

5.3 Lighting

Adequate lighting must be provided and maintained to ensure stevedoring operations can be carried out safely. Examples of lighting include external lighting towers, portable lights and crane lights.

Suitable deck and under-deck lighting on vessels should be provided for the task being carried out particularly for:

- access routes including access to lifting equipment
- ladders providing access to the ship, and
- working areas on board and adjacent to the ship.

Lighting levels should provide sufficient light for night time operations as well as enabling good visibility in cargo holds, taking into account glare, reflections or shadows. If portable lighting is used on vessels, electrical cables should be protected from accidental damage and positioned to prevent trip hazards.

5.4 Air quality

Emissions from plant and substances in ships' holds and storage areas may create hazardous atmospheres. Where there is a likelihood of reduced air quality that may affect health and safety, for example contaminated, oxygen-deficient or explosive atmospheres, a risk assessment should be carried out and relevant control measures implemented. Control measures may include:

- providing measures for detecting hazardous atmospheres
- providing natural or mechanical ventilation to prevent accumulation of harmful concentrations of gases, fumes, vapours and fumigants
- eliminating use of combustion-powered plant or equipment in poorly ventilated spaces e.g. by using electric forklift trucks
- managing the length of time plant is used e.g. switching off engines when not in use or limiting the number of vehicles allowed to run at one time
- providing access to safety data sheets (SDS) for hazardous chemicals
- training workers in emergency response related to hazardous atmospheres, and
- providing appropriate PPE like respiratory equipment and ensuring these are properly fitted, worn and maintained.

Where fumigation has been carried out, control measures include checking workers do not enter fumigated areas until these areas have been ventilated and are assessed as safe to enter.



5.3 Lighting

If the lighting on the job or ship is inadequate, stop work; inform the HSR and undertake a risk assessment to remedy the problem. You cannot be made to work in the dark.

- **Never lash by torch or helmet light.**
- **Never drive machinery in the dark with no visibility due to lack of lighting.**
- **Never ascend or descend on ladders, holds, cranes or stairs in the dark – make sure lighting is provided and adequate.**
- **The Company hates it but at night use shore crane for lighting and lash bay by bay at one time unless appropriate lighting is supplied.**

5.4 Air quality

Air quality must be monitored including fumes in ships holds, in sheds, fallout from ships funnels and the general environment at all areas of work taking into account all factors that impact.

With regards to diesel particulates, A panel of scientific experts convened by the World Health Organizations' (WHO) International Agency for Research on Cancer (IARC) concluded in June 2012 that diesel engine exhaust is a Group 1 carcinogen – that is, carcinogenic to humans.

Your employer cannot argue that they believe a workplace is safe, unless they have conducted independent testing to confirm what the levels are. From here the exposure levels for workers needs to be monitored to ensure workers exposure is within prescribed limits. If there is any doubt with regards to testing and or monitoring, the company and HSR's must try to resolve through consultation.

Make sure the ships' blowers are on with PCC or Ro-Ro.

These two additional codes may assist in this area.

Code of Practice: *Managing the risks of hazardous chemicals in the workplace.*

Code of Practice: *Confined spaces.*

https://www.safeworkaustralia.gov.au/resources_publications/model-codes-of-practice

https://www.safeworkaustralia.gov.au/system/files/documents/1702/managing_work_environment_and_facilities2.pdf

5. THE WORK ENVIRONMENT

Further guidance on managing the risks associated with contaminated or oxygen-deficient atmosphere is in the [*Code of Practice: Managing the risks of hazardous chemicals in the workplace*](#).

In some circumstances a ship's hold may meet the definition of a confined space under the WHS Regulations, for example where there is a risk to health and safety from harmful concentrations of an airborne contaminant. Information on working in confined spaces is in the [*Code of Practice: Confined spaces*](#).

5.5 Weather conditions

A risk assessment should consider how changes in weather may impact safe working practices, for example:

- when operating in proximity to reefers in wet conditions
- in high winds or when lightning is present
- stability of container stacks in high winds
- when conditions create poor visibility
- in periods of extreme low or high temperatures, and
- during periods of high solar ultra-violet (UV) radiation.

Control measures may include:

- using weather forecasts to plan activities
- fitting equipment and infrastructure with devices to manage the risk of lightning strike
- using wind speed measuring devices e.g. anemometers on plant like cranes and ceasing activities when safe levels are exceeded
- stacking containers so they are stable
- providing drinking water, appropriate breaks and shelter in extreme heat, and
- providing suitable PPE like wet weather gear and sun protection like a wide brim hat, long sleeved shirt, long pants, sunglasses and sunscreen.

Information about managing cranes in adverse weather conditions is in section 7.2 Cranes.

Further information about managing the risks associated with working in extremes of heat and cold is in the [*Code of Practice: Managing the work environment and facilities*](#).

5.6 Traffic management

There is a risk of death and injury in workplaces where vehicles, mobile plant and people share the same work areas.

Regulation 215

Persons with management or control of powered mobile plant must ensure that the risk of powered mobile plant colliding with pedestrians or other plant is controlled, so far as is reasonably practicable. If there is a possibility of collision, the powered mobile plant must have a warning device that will warn persons who may be at risk from the movement of the powered mobile plant and measures must be taken to eliminate or minimise the risk.



5.5 Weather conditions

The code provides a good set of points for consideration in adverse weather environments. We should work through each of the points in 5.5 and determine what action may be required to deal with adverse weather.

See also Code of Practice: *Managing the work environment and facilities*.

[https://www.safeworkaustralia.gov.au/resources_publications/model-codes-of-practice]

If all port operators operated on one procedure and the stevedores were made to operate under that, this stops separate stevedores operating whilst others have stopped.

5.6 Traffic management

Check your boss's traffic management plan. WHS committees should regularly review and update traffic management plans. Make sure the plan is dynamic and it ensures machines do not collide.

Ensure everyone is trained in the traffic flow plan. The onus is on the employer. So we need to ensure the traffic management plan provides the safest operations, not just productivity.

Obey all road rules and traffic lights. DO NOT SPEED.

Traffic management must include clear access at all times for emergency services to all areas

The code is useful in identifying the many aspects we need to consider in managing traffic in workplaces.

This aspect of safety is well developed and the code draws reference to the WHS Regulation 215.

There are also additional tools available to us:

General guide for workplace traffic management.

[<https://www.safeworkaustralia.gov.au/system/files/documents/1703/traffic-management-general-guide.pdf>]

5. THE WORK ENVIRONMENT

VESSEL AND LANDSIDE

Where reasonably practicable the work environment should be designed so vehicles and powered mobile plant are separated from pedestrians.

When managing traffic risks in ports you should consider:

- vehicle and pedestrian movements
 - on the wharf
 - on and off ships
 - on decks and in cargo storage, receipt and delivery areas within the terminal or facility
 - during truck loading and unloading, reversing, queuing and parking activities
- controlling contractor and visitor movement at the site, and
- the condition of travel surfaces.

TRAFFIC MANAGEMENT PLANS

The development of a traffic management plan assists in managing risks and communicating information about control measures.

A traffic management plan should be developed in consultation with workers. It can provide details about:

- the desired flow of pedestrian and vehicle movements
- the expected frequency of interaction of mobile plant, vehicles and pedestrians
- traffic controls for each expected interaction including illustrations of the layout of barriers, walkways, signs and general arrangements to warn and guide traffic around, past, or through a work site or temporary hazard
- exclusion zones
- roles and responsibilities of people in the workplace for traffic management, and
- instructions or procedures associated with the control of traffic including in an emergency.

Traffic management plans should be updated to address changes in traffic movements.

More information about how to manage traffic at a workplace is in the [*General guide for workplace traffic management*](#).

COMMON USER FACILITIES

In managing common user facilities, particularly when more than one business or undertaking may be working in the same area, traffic routes for neighbouring operations should be considered to ensure different activities can be safely carried out without increasing the risk.

The common user operator should develop a traffic management plan in consultation with the relevant stakeholders working onsite. Each stevedoring company should develop its own traffic management plan.

5. THE WORK ENVIRONMENT

ROLL ON/ROLL OFF AND PURE CAR CARRIERS

A traffic management plan should be implemented to control vehicle and pedestrian movements for each entrance and exit ramp and for ramps within the vessel. Where the ramp design prevents physical separation other control measures should be used to prevent the simultaneous use of the ramp by vehicles and pedestrians.

Workers involved in the operations should be kept informed of this plan and of changes to it.

When preparing a traffic management plan for RoRo or PCC you should consider using:

- traffic configurations
- speed limits
- co-ordination of RoRo activities across multiple decks
- management of pedestrian movement including separating pedestrians from vehicles on ramps by using separate walkways or separate access times, and
- management of multi-use roadways.

Before the start of RoRo operations hazardous routes or areas that could be mistaken for normal drive-on drive-off routes should be identified. These routes should then be clearly marked and barricaded. Suitable warning notices should be posted on the ramp.

A nominated person—a competent signaller or guide—should direct all vehicles being reversed or manoeuvred into stowage positions on deck.

A safe system of work should be implemented to manage the movement of vehicles on decks. This should consider vehicle speeds, restricted driver visibility, safe stowage or positioning, and whether other activities are being carried out at the same time.

A person guiding a vehicle into a final position on the vessel should wear high visibility clothing and ensure they are always visible to the driver, either directly or via vehicle mirrors. Where this is not possible they must position themselves clear of the vehicle and trailer movement and away from the risk of being trapped or crushed. Before signalling a driver to proceed they must ensure it is safe to do so.

Signals for guiding drivers, like using a hand signal to indicate an emergency stop, should be agreed and understood before starting work. Only authorised people should be on deck while loading or discharging operations are being carried out and everyone should be provided with high-visibility clothing.

TRAFFIC MOVEMENT WITHIN A TERMINAL OR FACILITY

Truck routes and loading and unloading points should be marked out or otherwise indicated.

Loading and unloading areas should be clear of other traffic, pedestrians and people not involved in the activity.

Trucks should not be loaded or unloaded in any other position without permission of the supervisor or foreman. Truck ranking should not be allowed inside the loading and unloading areas and the vehicle twist locks should be released after entry and locked before exit from the site.

Truck drivers should follow site safety rules and traffic management plans including being aware of exclusion or no-go zones when loading or unloading. Traffic management includes designating safe zones for the driver to exit the cab to allow for the release of twist locks. If there are no site rules a risk assessment should be carried out to determine the safest location for the driver and other workers.



The work environment

Work Boxes / Man Cages

Work box requirements

Work boxes must be design registered with the regulator. Crane-lifted work boxes should:

- have the working load limit, tare mass and design registration number clearly marked e.g. on a data plate
- have sides not less than 1 metre high
- have fall-arrest anchorage points
- be correctly tagged
- have lifting slings supplied to be attached to the lifting points by hammerlocks or moused shackles
- have a safety factor for each suspension sling of at least eight for chains and 10 for wire rope
- where provided, a door is to be inward opening only and self-closing with a latch to prevent unintentional opening, and
- first aid boxes may be provided with outward opening doors for ease of access, but doors are to be self-closing with automatic latches.

5. THE WORK ENVIRONMENT

Movement of vehicles in cargo storage areas

Where vehicles are used to handle cargo the area should be kept separate from pedestrians and other operations, where practicable. Barriers should be used where pedestrian routes are adjacent to stacking areas to prevent collision between equipment and people. Signs should be displayed warning unauthorised entry to the area is prohibited.

Reversing vehicles

Where practicable, design the flow of traffic to minimise reversing. Where it is necessary to reverse vehicles, for example in RoRo activities, control measures may include:

- helping drivers detect movement around the vehicle through mirrors, reversing cameras, sensors and alarms
- using visual warning devices like flashing lights
- having high-visibility markings for powered mobile plant, and
- ensuring the provision and use of effective communication systems e.g. between signallers and drivers and between plant operators including straddle carriers and trucks.

Vehicles queuing and parking

Work areas should have clearly visible speed limit signs and lines showing truck queuing and vehicle parking areas. In order to control unexpected truck queuing and congestion a truck marshalling area can be used.

Private vehicles should be kept separate from stevedoring operations.

LANDSIDE - STRADDLE CARRIERS

Straddle carriers often operate in proximity to other vehicles and pedestrians. Where straddle carriers are used you should ensure:

- a straddle carrier grid is maintained for the safe movement of vehicles and loading and unloading operations, and
- safe areas are designated within the grid to allow safe manoeuvring of straddle carriers, other vehicles and movement of workers.

A safe system of work for the loading and unloading of trucks should be part of the traffic management plan.

Grids

Loading and unloading containers from road vehicles should be carried out on identified straddle carrier exchange grids. Grids provided for straddle carriers to load or unload containers from road vehicles should be clearly marked and not used as general waiting areas for road vehicles.

Where possible a straddle carrier should:

- approach a road vehicle from the rear during loading or unloading and then leave the vehicle by moving away from the vehicle's rear, and
- approach a grid slot from the opposite direction of road vehicles.

Ample space should be provided for road vehicles to reverse into a slot on a grid safely if this manoeuvre is necessary. Any oversize container or problem container that cannot be handled safely at the grid should be moved to a suitable designated area where it can then be handled.



Straddle carriers

Along with all types of plant machinery, Straddle Carriers pose a serious risk to workers if maintenance, inspection and, if necessary, testing of plant isn't carried out by a competent person.

It is crucial that operators continue to carry out pre start check as thoroughly as possible and report any and every defect so that maintenance are aware of anomalies. If the pre start checking system is not adequate or operators feel they do not have adequate time to carry out the checks then this should be raised with management through the relevant HSR's.

Only properly trained and competent personnel should operate Straddle Carriers. Manufacturer's Instructions should be referenced if there is any confusion around the use of Straddle Carriers and if HSR's request this information, it must be made available by management.



5. THE WORK ENVIRONMENT

Safe areas – vehicle drivers

A designated safe area where drivers of road vehicles can stand while containers are being lifted onto or off their vehicles should be provided and clearly marked. The safe area should be located so people in it are clearly visible to drivers of straddle carriers as they approach. If the area is located between slots the size of the area should be determined for the grid layout, the width of the straddle carriers and other relevant operational factors.

When loading or unloading a road vehicle the driver should leave the cab of the vehicle and stand in a clearly marked area before the approach of a straddle carrier. This area should be forward of the cab of the vehicle, a safe distance from the vehicle and visible to the straddle carrier operator. The driver should remain in the marked area throughout the loading or unloading operation and not return to the cab until the straddle carrier has left the grid. The straddle carrier operator should not approach the grid if the driver of the truck cannot be seen.

5.7 Managing the risk of falls and falling objects

Working at height including accessing the hold of a ship or working on top of containers involves the risk of a fall.

Regulation 78

A PCBU must manage the risk of a fall from one level to another that is reasonably likely to cause injury to the person or another person. Wherever reasonably practicable, the risk of a fall must be eliminated by working on the ground or on a solid construction. In this case ensure the area has:

- a surface structurally capable of supporting people, material and any other loads on it
- barriers erected around any open penetrations
- an even and readily negotiable surface and gradient, and
- a safe means of access and egress.

Regulation 79

If it is not reasonably practicable to work on the ground or on solid construction, a safe system of work must be provided using the following control measures in order of priority:

- fall prevention devices (for example, temporary work platforms and guard railing)
- using a work positioning system that ensures workers work within a safe area, and
- implementing fall arrest systems to minimise any distance of a fall (e.g. within hold of vessel or when securing tops of containers).

Stevedoring operations where control measures for fall prevention are required include when:

- accessing the ship's decks, hatchways and holds
- using ladders, stairs, ramps, landing stages and gangways
- working in the vicinity of holes or cavities on board ship e.g. near hatchways or on top of cargo where voids are created during discharge and loading
- working on top of containers
- working on equipment at an elevated height, and
- accessing crane cabins.



5.7 Managing the risk of falls and falling objects

"Have a look mate" was the traditional means of avoiding risk on the waterfront. What we have seen with the advent of huge machines and technology is huge weights and objects being carried and operating overhead. Every incident is now a potential fatality.

Crane work is well regulated in the community and this code sees a further development in safety for waterside workers.

When working below or on the gangway-stage-wharf ensure there is somewhere for you to get out of the way in case a load falls or crane fails.

If there's nowhere to go, the lift should not proceed until workers are safely out of the way.

References to Regulation 78 and 79 of the WHS Regulations are to be noted and replicated in the code.

See also Code of Practice: *Managing the risk of falls at workplaces*.

[https://www.safeworkaustralia.gov.au/resources_publications/model-codes-of-practice]

WHS Regulation 54 and 55 are to be observed and utilised in relation to falling objects.

- **Never work under a suspended load.**
- **Never stand under or near a suspended load.**
- **Ensure control measures for fall prevention are observed.**
- **Never lift a load over workers who cannot find a secure safe .**
- **Know the weight of what you are lifting and never exceed the safe working load of any machine or gear.**
- **When working in a hatch make sure before you start you know the quickest escape route and stand in it or alongside it.**
- **All truck/trailer drivers to exit vehicle when loading/discharging – including wharfies.**

NOTES:

5. THE WORK ENVIRONMENT

For example, if it is necessary to access the top of a container safe means of access including a work box or personnel cradle should be provided and used in accordance with section 7.2.3. If this equipment is not available, fall arrest equipment must be worn.

More information about how to manage the risks of working at heights is in the [Code of Practice: Managing the risk of falls at workplaces](#).

SHIP MOVEMENT AND RAMPS

Pontoons supporting shore ramps or passenger walkways should be as steady as practicable in all weather and tide conditions. They should be capable of withstanding the maximum forces to which they may be subjected during mooring. This should include likely ramp movement resulting from the local tidal movements, and ranging and drifting of the ship or pontoon at its moorings. Walkways should be designed to tolerate forces in all three planes and torsional forces. Transitional flaps at their ends should be included if necessary.

FALLING OBJECTS

Regulation 54

A PCBU at a workplace must manage risks to health and safety associated with an object falling on a person if the falling object is reasonably likely to injure the person.

Regulation 55

If it is not reasonably practicable to eliminate the risk referred to in regulation 54 the person conducting the business or undertaking at a workplace must minimise the risk of an object falling on a person by providing adequate protection against the risk.

The person provides adequate protection against the risk if the person provides and maintains a safe system of work, including:

- preventing an object from falling freely, so far as is reasonably practicable, or
- if it is not reasonably practicable to prevent an object from falling freely—providing, so far as is reasonably practicable, a system to arrest the fall of a falling object.

Falling objects pose a significant risk when carrying out stevedoring operations. Control measures may include:

- using the appropriate equipment to raise and lower cargo including ensuring that safe working load (SWL) is not exceeded—see section 7
- stacking containers and other cargo so they are stable
- providing overhead protective structures on mobile plant to protect plant operators, and
- establishing exclusion zones where loads are being lifted overhead.

5.8 Noise

Regulation 57

A PCBU at a workplace must manage risks to health and safety relating to hearing loss associated with noise and ensure that the noise that a worker is exposed to at the workplace does not exceed the exposure standard for noise.

Regulation 58

A PCBU must provide audiometric testing for a worker who is carrying out work for the business or undertaking if the worker is required to frequently use personal hearing protectors as a control measure for noise that exceeds the exposure standard.



5.8 Noise

There is ample regulation we can utilise in regard to noise to deal with risk areas.

Code of Practice: *Managing noise and preventing hearing loss at work*

[https://www.safeworkaustralia.gov.au/resources_publications/model-codes-of-practice]

and WHS Regulations 57 and 58 can assist in our struggles with employers.

Act on noisy workplaces and machines. Deal with it now or the effects will hit you as they have with so many older waterside workers.

- **If a machine is too noisy, get it tested.**
- **See your branch to organise hearing tests.**
- **PPE is a last resort. Not the first option.**

Results of individual hearing tests to be made available to worker- reference material for future use. A HSR is entitled to access these results once direct permission from the person is granted. Bosses cannot hide this information.

NOTES:

5. THE WORK ENVIRONMENT

Noise monitoring provides a means of assessing noise levels and length of exposure and the data obtained can be used to determine suitable control measures to minimise the risk of hearing loss.

Noise from vehicles, engines and transmission equipment used in an enclosed space like a ship's hold may be hazardous to operators in the vicinity.

Further guidance on the noise exposure standard, control measures and audiometric testing is in the [*Code of Practice: Managing noise and preventing hearing loss at work*](#).

5.9 Managing fatigue

Fatigue is more than feeling tired and drowsy. In a work context, fatigue is a state of mental and/or physical exhaustion which reduces a person's ability to perform work safely and effectively.

Fatigue increases the chance of workplace injuries and if prolonged can negatively affect a person's health and wellbeing.

Control measures for managing fatigue include providing workers with adequate breaks between shifts.

A fatigue management plan may be developed to help control the risks of fatigue. It may include procedures for managing:

- hours of work or shift rostering are designed to minimise fatigue, and
- environmental conditions e.g. working in adverse weather contributes to fatigue and individual factors.

Workers must also co-operate with any reasonable policy or procedure relating to fatigue at the workplace, for example policies on fitness for work or second jobs.

Workers' duties in relation to fatigue do not mean they must never work extra hours. However, they should talk to their manager or supervisor to let them know when they are fatigued. They should also avoid working extra hours and undertaking safety critical tasks when they know it is likely they are fatigued.

Further information is in the [*Guide for managing the risk of fatigue at work*](#).



5.9 Managing fatigue

This is a huge area that employers are often hesitant to deal with as it can impact upon labour flexibility. It can also impact upon roster configuration.

Managing fatigue needs to be a regular agenda item of WHS committees and union committees. Shift patterns, irregular work and excessive long shifts and night shifts should be strictly monitored particularly in more irregular general stevedoring operations.

Fatigue issues should be regular agenda items on your WHS committee.

A major problem in ports that do moorings is fatigue. For example when a vessel coming into port wants a tie-up at 3am, our members do a standalone mooring at 3am, then start at 6am for a 12 hour shift. We need to enforce some sort of ruling on mooring times before shifts start.

Guide for managing the risk of fatigue at work.

[<https://www.safeworkaustralia.gov.au/system/files/documents/1702/managing-the-risk-of-fatigue.pdf>]

References to company fit-for-work requirements should be ignored and dealt with as an industrial issue through your branch of the Maritime Union of Australia.

NOTES:

6. HANDLING LOADS AND CARGO

There should be safe work procedures for loading and unloading. If the procedures do not address the hazards of the work to be carried out, then a risk assessment should be done.

6.1 Suspended loads

Regulation 219

The person with management or control of plant at a workplace must ensure, so far as is reasonably practicable, that plant that is used to lift or suspend persons or things is specifically designed to lift or suspend the load. If it is not reasonably practicable to use plant that is specifically designed to lift or suspend the load, the person must ensure that the plant does not cause a greater risk to health and safety than if specifically designed plant were used.

The person must ensure that the lifting and suspending is carried out with lifting attachments that are suitable for the load being lifted or suspended, and within the safe working limits of the plant.

The person must ensure, so far as is reasonably practicable:

- that no loads are suspended or travel over a person unless the plant is specifically designed for that purpose.
- that loads are lifted or suspended in a way that ensures that the load remains under control during the activity, and
- that no load is lifted simultaneously by more than 1 item of plant unless the method of lifting ensures that the load placed on each item of plant does not exceed the design capacity of the plant.

Handling suspended loads is a high risk activity and involves various plant including mobile, vessel and gantry cranes, forklifts and other specialised cargo handling equipment. A risk assessment should be carried out. Control measures for handling suspended loads may include:

- implementing exclusion zones to ensure workers are clear of the active arc of suspended travel while suspended loads are being lifted or lowered, and
- prohibiting working or walking under suspended loads.

COMMUNICATION

A reliable way for the crane operator and any person directing the load to communicate is essential for safe crane operation. Failure to implement reliable communication may lead to unsafe crane operations and contribute to injury to or death of people from:

- dropped loads, and
- collision with other plant and structures.

Only one person should give signals at one time. Signals may be visual, audible or a combination of both. When more than one person is involved in directing a lift each person should understand when responsibility for their part of the lifting operation should be handed over to the other person.



6. HANDLING LOADS AND CARGO

* This is a strong section of the code and a lot of work was done to tailor the subject to the stevedoring industry.

6.1 Suspended loads

WHS Regulation 219 deals with the general requirements of suspended loads and is called up in the code.

- Never operate without a hatchman.
- No load is suspended or lifted over a person.
- Loads are controlled.
- Never lift above the safe Working Load of gear or crane.
- Don't be worried about overkill with lifting anything.
- 1x person in charge of overall lift using multiple lifting appliances.

The code, Regulations and Act should be strictly followed.

CHECK ALL LIFTING GEAR

6. HANDLING LOADS AND CARGO

Effective communication is particularly important where the crane operator cannot:

- see the load
- see the load's landing area
- see the path of travel of the load or the crane
- make an accurate judgement of distance, and
- see if the crane or the load may contact overhead electric lines.

People using communication equipment should be familiar with the manufacturer's operating instructions. When using radios a dedicated frequency should be selected for the duration of the crane operations to prevent interference with other radio equipment being used in the vicinity of the crane. Work should stop immediately if there is a loss of communication.

Further information on doggers and riggers is in section 6.4.

PRE-SLUNG LOADS

Extra caution should be applied when working with pre-slung loads as the condition of the load and equipment may be uncertain. For example, gear may have been certified but damage may have occurred and be concealed under the load. If a ship cannot produce the required certificate your own lifting gear should be used.

The following control measures should be considered for work involving pre-slung loads:

- maintaining and documenting a system of inspection—inspection should be done by qualified personnel and completed before all gear is used
- removing and appropriately tagging out of service damaged gear
- implementing exclusion zones in the vicinity of the lift
- providing workers with information, training and instruction to select the right gear
- supplying information before a ship's arrival and including pre-operational inspections and checks as part of the general inspection regime
- implementing an auditable system of certification of the SWL of gear used, and
- using gear only with reference to actual marked SWL and not basing selection on colour coding.

6.2 Lashing and unlashings containers

Marine Order 42: *Cargo stowage and securing* sets out requirements for vessel masters to ensure cargo is adequately secured.

The workers who will be performing the lashing or unlashings should be provided with information and instruction, for example at a pre-shift tool box talk or a planning meeting. This may include the lashing plan. Workers who are required to work on or near the vessel must be made aware of the exclusion zone protocols.

The safety of lashing positions on ships carrying containers should be assessed during vessel inspection. Lashing activities should not be carried out if lashing positions do not provide adequate protection against falls—see section 5.7. Any concerns should be recorded on the vessel inspection sheet and addressed before work commences.



6.2 Lashing and unlash containers

This was a contentious section of the code complicated by AMSA's attack on the safety of waterside workers through M032. It is however thorough. Lashing is a task that requires utmost care and preparation as it is the major source of waterfront injury.

Marine Order 42: Cargo stowage and securing sets out requirements for vessel masters to ensure cargo is adequately secured.

- **Never work alone.**
- **Lashing bars must be stowed away and not left on decks and walkways.**
- **Three high lashing bars should be held by two persons at all times.**

Putting away lashing bars will take extra time. Do not rush as that is when injuries occur. Make sure the appropriate number of lashers for the task are allocated and if takes extra time then it

takes extra time but we should not risk our life and limb because lashing bars are not stowed and left littered on the deck and walkways in an unsafe manner.

The following codes apply to lashing work:

- **Code of Practice: *Managing electrical risks at the workplace.***
- **Code of Practice: *Managing the risk of falls at workplaces.***
- **Code of Practice: *Hazardous manual tasks.***
- **Code of Practice: *Work health and safety consultation, co-operation and co-ordination.***

[https://www.safeworkaustralia.gov.au/resources_publications/model-codes-of-practice]

Importance of exclusion zones – not in place at all sites.

NOTES:

6. HANDLING LOADS AND CARGO

DURING LASHING AND UNLASHING

Workers lashing and unlashings should never work alone. If there are teams working near each other, for example one lashing and one loading, ensure effective communication is maintained between the teams, supervisors, managers and ship's crew so each team is aware what the other is doing and safe areas of work are identified. Toolbox talks can be used to inform workers at the change of shift about safety issues related to the work and reminding workers of relevant safe work procedures.

Issues to be considered in planning and undertaking lashing include the weight and length of lashing bars, obstructions, working around raised hatch lids, container size and ship configuration.

Control measures for lashing and unlashings activities may include:

- having a system of inspections
- working from a stable, level base
- positioning the body to keep out of reach of lashback
- ensuring hatchway access covers can be pinned back
- maintaining an awareness of other operations in the area including crane movements and not working within exclusion zones
- ensuring at least one worker maintains control over the lashing gear when it is elevated
- ensuring lashing rods are never left hanging
- eliminating the practice of leaning lashing bars against containers during lashing work, where practical
- using PPE suitable for the task, and
- eliminating, or if not reasonably practicable, minimising double handling of lashing bars and equipment to minimise manual handling risk.

Where lashing equipment is to be re-used in the same work area it should be stored safely on the side of a walkway to minimise the risk of a trip hazard, as shown at Figure 1.

Figure 1 Safe storage of lashing bars to be reused



6. HANDLING LOADS AND CARGO

WORKING ON TOP OF CONTAINERS

When work is carried out on top of containers this can create a risk of falls. Further information about risks of falls is in section 5.7.

When work on container tops cannot be avoided safe means of access should be provided. Wherever possible this access should be part of the ship's permanent superstructure like lashing platforms.

When such access is not possible, safe access should be provided by the use of a crane and purpose built work box or personnel cradle. Further information on crane personnel cradles or work boxes is in 7.2.3.

When work has to be carried out on container tops, suitable fall prevention or fall arrest systems of work should be devised and used in order to eliminate or control the risk of falling. Fall prevention systems include working from inside a work box or personnel cradle, or secured to a short lanyard that prevents falls from open sides of containers.

When a work box or personnel cradle is used it can be moved slowly across the top of each tier of containers while workers in it place or remove twistlocks. Communication with the crane operator should be maintained at all times to ensure safety of the workers in the work box or personnel cradle.


It may be necessary at times for workers to leave a work box or personnel cradle to go to the corners of the containers carrying equipment like twistlocks, bridging pieces or locking poles. Where this is necessary they should wear a full body harness and be connected to a secure anchorage point by lanyards, safety lines or inertia reel fall arrest equipment.

Work on top of containers should cease in highwind conditions.

BEFORE SHIP DEPARTURE

Once lashing and unlashings activities have finished excess lashing gear should be safely secured in designated stowage compartments, where available, in accordance with the vessel master's requirements—see Figure 2 below.

Figure 2 Preferred storage methods for lashing bars

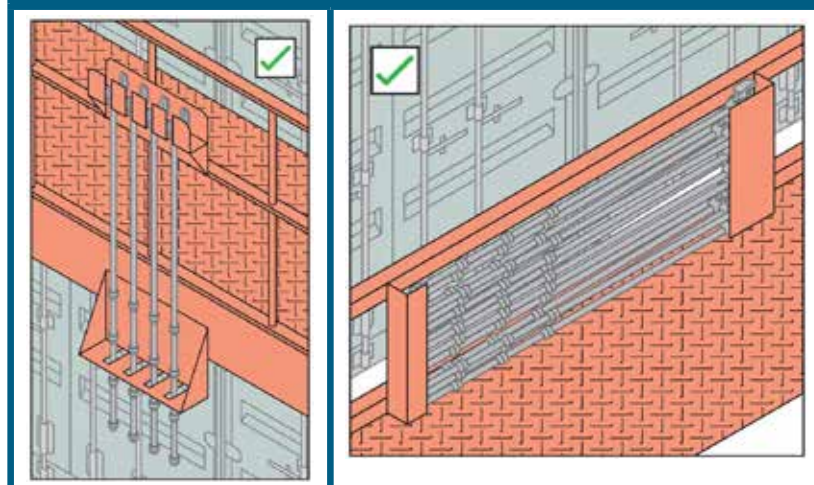

6. HANDLING LOADS AND CARGO

6.3 Working in ships' holds

Management of the risks associated with ships' holds includes the management of the atmosphere in a hold—see section 5.4—and the prevention of falls—see section 5.7. Workers should be provided with the relevant information, instruction and training to handle the relevant cargo safely. The work environment should be safe for plant to operate and clear of obstructions and risks of falling cargo. There should be a system to identify safe zones for workers, taking into account mobile plant that may be operating in the hold and crane operations.

This section provides further details on control measures for hatches and openings, ladders and for monitoring cargo operations in holds.

WORKING WITH HATCHES AND OPENINGS

Hatches and openings that provide access to holds should be checked to ensure:

- they are protected by coamings
- there is adequate clear space around the coamings to allow easy access
- hinged and pontoon hatch covers are secured, or removed if not adequately secured, to prevent them from accidentally closing during access
- approaches to a hold and an access hatch are kept unobstructed to reduce the risk of falls and to enable holds to be evacuated quickly in an emergency
- hatch covers are closed when the hatch is not in use to eliminate the risk of falls, and
- means of access includes a ladder which is clear of the hatchway through which cargo is loaded or unloaded.

Where hatch covers are raised, temporary fencing can be used as a control measure to prevent falls. Temporary fencing should be made up of:

- at least two parallel rails, ropes or chains
- the top rail, rope or chain is at least 1 metre above the walking surface
- the mid rail approximately half way between the top rail and the walking surface
- if made of rope or chain it should be kept as taut as practicable, and
- fencing uprights should be no more than 2.5 metres apart.

Further information is in the [*Code of Practice: Managing the risk of falls at workplaces*](#).

Mechanically operated hatch covers

Mechanical, hydraulic or electrically powered hatch covers should only be operated by designated members of the ship's crew or other authorised people. When operating these types of hatch covers:

- warn people in the vicinity of the hatch cover before the hatch is opened or closed and instruct them to move to a safe area
- clear people and objects from the hatch cover before it is opened, and
- position preventer chains or other securing devices before permitting people on top of a retracted hatch cover.



6.3 Working in ships' holds

This is a vitally important section of the code.

The requirements and rules to ensure the eyes and ears of the crane driver and hatchman, are in place at all times required.

The wording in the code is effectively the wording from Marine Order 32.

Code of Practice: *Managing the risk of falls at workplaces.*

[\[https://www.safeworkaustralia.gov.au/resources_publications/model-codes-of-practice\]](https://www.safeworkaustralia.gov.au/resources_publications/model-codes-of-practice)

- Don't drive blind – make sure you have a hatchman.
- Hinged hatch lids to be cleared of all twistlocks prior to being raised- can dislodge if contacted.
- No access below if lids in place – confined space.

6.4 Types of cargo

The range of references to various sources in this section outlines the breadth of information on various cargoes and working with them.

- **Always know the Safe Working Load.**
- **Know the weight of the load.**
- **A licensed dogman is required when undertaking lifts requiring judgement or where the load is not always within view of the plant operator.**
- **The dogman should assess the load before discharging and loading.**
- **Workers must hold a Dogging High Risk Work (HRW) licence to carry out dogging work.**

Extra information on bulk cargo properties can be found here:

- **Marine Order 33: Cargo and cargo handling - grain.**
- **Marine Order 34: Solid bulk cargoes.**
- **Marine Order 35: Additional safety measures for bulk carriers.**

[\[https://www.amsa.gov.au/vessels-operators/regulations-and-standards-vessels#collapseArea3\]](https://www.amsa.gov.au/vessels-operators/regulations-and-standards-vessels#collapseArea3)

6. HANDLING LOADS AND CARGO

WORKING WITH LADDERS

The ship's permanent access should be the primary means of accessing cargo holds.

Where a portable ladder is in use in a hatchway, no cargo may be loaded or unloaded through that hatchway. When using portable ladders in holds they should be:

- not more than 6.5 metres long, non-extendable and in good condition
- placed on a firm and secure surface at an angle of between 70 and 80 degrees to the horizontal, and
- secured at their upper resting position which must be at least one metre below the top of the ladder or held steady while being used.

Guidance on the use of ladders for shore operations is in the [*Code of Practice: Managing the risk of falls at workplaces*](#).

MONITORING CARGO OPERATIONS

Loading or unloading by means of a crane or derrick should not be carried out unless:

- the operator has an unrestricted view of the load at all times during loading or unloading, or
- a hatchman is employed for each crane or set of derricks who is clearly visible to the operator.

Where people are in a cargo space in connection with loading or unloading, whether or not a crane or derrick is being used, there should be a lookout who:

- has a good view of the space
- is able to see potential hazards to the people in the space
- is able to communicate with the people in the space, and
- is tasked with warning people in the space of any perceived hazard.

The cargo space lookout may be a person with other duties, like a hatchman or the crane operator, provided the person is capable of performing the duties assigned effectively.

Loading or unloading should not be carried out in a cargo space where two or more cranes or sets of derricks are working simultaneously and separately unless:

- a separate hatchman is provided for each crane or set of derricks
- where work is to be carried out at different levels, a net or other equivalent protection is rigged to prevent people and cargo falling from the upper level, and
- each hatchman is provided with a safe operating area on deck at a location that provides adequate visibility for the hatchman to carry out their function.

Further information on the use of cranes is in section 7.

6.4 Types of cargo

WORKING WITH GENERAL CARGO

When handling cargo, the inspection of wires, ropes, chains and lifting gear should be carried out.

6. HANDLING LOADS AND CARGO

Regulation 219 (4)(b)

The person with management or control of plant at a workplace must ensure lifting and suspending is carried out within the safe working limits of the plant.

Cargo must be handled within safe working load (SWL) limits for the plant to ensure this:

- establish cargo weights and consider these when determining lifting method and equipment to be used, and
- identify the SWL and make sure the plant or crane operator knows the weight of the load.

A licensed dogger is required when undertaking lifts requiring judgement or where the load is not always within view of the plant operator. The dogger should assess the load before discharging and loading. Workers must hold a Dogging High Risk Work (HRW) licence to carry out dogging work.

Note: Licensed riggers have completed the Dogging unit of competency as a prerequisite to get their rigging HRW licence and are therefore able to legally carry out dogging work.

Slinging loads where judgment is not required and the load is lifted within the view of the plant operator at all times is not defined as dogging work under the WHS Regulations and a dogger is not required.

The dogger or rigger is responsible for the safe slinging and movement of the load and providing accurate directions to the crane operator on load movement to ensure crane and load stability. This includes:

- communicating the weight of the load to the crane operator to help ensure the rated capacity of the crane and lifting attachments is not exceeded
- calculating the safe working loads of the ropes, slings, chains and other lifting accessories to be used in the lift
- providing the crane operator with clear and accurate directions and communicating with other people in the crane working area, and
- taking precautions when directing a pick-and-carry crane across rough surfaces and checking the area for other hazards.

Provisions for monitoring cargo operations are in section 6.3.

WORKING WITH DRY BULK

Dry bulk is cargo shipped in large unpackaged amounts, for example fertilisers, grain, gravel, sand, salt, concentrates, wood chips, coal and mineral ores.

Before loading or discharge, dry bulk should be assessed for dangerous and hazardous substances. Dry bulk may consist of materials that emit dangerous gases, spontaneously combust, liquefy, develop hot spots, develop biological hazards or become unstable. Safety Data Sheets (SDSs) should be used in assessing the risks of hazardous substances.

Dust levels, wind speed and direction should be monitored to prevent risk from exposure, for example to the public, in utilities rooms and to other vessel operations. Dust types include explosive, toxic and nuisance dust. Fire risks should be identified and adequate trained personnel and equipment provided at the workplace in response.

Where access to the hold is required for unloading bulk cargo a means of escape in case of emergency is needed. Where people and mobile plant are both working in the hold they should be kept separate.

6. HANDLING LOADS AND CARGO

Ensure plant and equipment used for loading and unloading dry bulk, including conveyors, are fit for purpose, maintained and inspected as required.

Marine Order 33: *Cargo and cargo handling - grain*, Marine Order 34: *Solid bulk cargoes* and Marine Order 35: *Additional safety measures for bulk carriers* provide extra information on bulk cargo properties.

WORKING WITH LIQUID BULK

For further information about bulk cargo including liquid bulk is in Marine Order 17: *Liquefied gas carriers and chemical tankers*.

ROLL ON ROLL OFF ACTIVITIES

RoRo activities involve the loading, unloading, lashing and unlashings of wheeled cargo. Critical areas for control in RoRo operations are the management of vehicle movements and of manual tasks. Information on traffic management for RoRo is also included in section 5.6.

Whenever multiple gangs are working in the same area or at the same time, like a gang lashing and one unparking controls should be in place so one gang does not adversely impact the safety of another.

MANUAL TASKS IN ROLL ON/ROLL OFF ACTIVITIES

Regulation 60

A PCBU must manage the risk of a musculoskeletal disorder associated with hazardous manual tasks.

Control measures for managing manual tasks for RoRo may include:

- using levers, ratchet binders, extension bars
- having appropriate power units to jump start vehicles
- using correct techniques for lashing and unlashings
- rotating tasks to reduce exposure to highly repetitive manual tasks, and
- ensuring lashing straps under cars are reasonably easy to get on and off.

Further guidance about managing the risks associated with hazardous manual tasks is in the *Code of Practice: Hazardous manual tasks*.

LIVESTOCK

Information on loading and stowage of livestock is in Marine Order 43: *Livestock cargoes*.

6.5 Storage, stowage and securing of cargo

Cargo not in containers, for example coils, pipes and beams, should be stored or stowed in stable stacks. Cargo may be moved repeatedly during loading, discharging and storage. This may create new risks or change already identified risks. Ongoing risk management is required to ensure these risks are eliminated or minimised.

Ensure there is a plan for stacking cargo which takes into account the:

- floor capacity of the storage area
- type, dimensions and weight of cargo and method of storage
- potential for stored energy due to stacking arrangements



The code lays out stowage arrangements for cargo in various locations.

- **Car jobs have become areas of severe discipline by employers.**
- **When unlashing make sure that space is appropriate to avoid personal contact with vehicles.**
- **If space is inadequate do not unlash until the work area is made safe.**

6. HANDLING LOADS AND CARGO

- safe access and egress for workers
- mechanical handling equipment and ability to operate it safely
- exclusion zones to separate mobile plant and people
- storage or separation requirements of hazardous chemicals or dangerous goods
- length of time the goods or material will be kept, and
- stability and securing devices for different types of cargo.

Control measures for safe storage include:

- ensuring stacks of goods remain stable—the maximum height of the stack is determined by the need to ensure the stability
- ensuring coils:
 - are used with end stops in the vicinity of pedestrian walkways
 - are supported by coil collapse arrest systems when in the vicinity of amenities or offices
- using racking systems where appropriate
- using jersey curbs
- using dunnage correctly including:
 - using means other than hands to place dunnage under loads
 - avoiding placing hands or limbs under loads during glutting
- using correct chocking methods like:
 - fixed chocks at the end of walkways
 - materials used for chocking and dunnage are fit for purpose and sufficient to withstand the weight of the load
- using bolsters at the end of walkways
- identifying and communicating the load bearing capacity of floors, and
- maintaining exclusion zones where identified.



6.5 Storage, stowage and securing of cargo

A person conducting a business or undertaking must manage risks to health and safety relating to a musculoskeletal disorder associated with a hazardous manual task.

Consideration should be given to:

- **postures, movements, forces and vibration relating to the hazardous manual task**
- **the duration and frequency of the hazardous manual task**
- **workplace environmental conditions that may affect the hazardous manual task or the worker performing it**
- **the design of the work area**
- **the layout of the workplace**
- **the systems of work used**
- **the nature, size, weight or number of persons, animals or things involved in carrying out the hazardous manual task**

Ref: Section 60 WHS Regulations

7. PLANT AND EQUIPMENT

The WHS Regulations include specific duties for a PCBU with management or control of plant to manage health and safety risks associated with the plant, as well as requirements for powered mobile plant and plant that lifts or suspends loads. Information on how to meet these duties is in the [Code of Practice: Managing risks of plant in the workplace](#).

The person conducting the business or undertaking should ensure an up-to-date register of the items of plant requiring regular inspection and maintenance is kept. It should include information on:

- allocated responsibilities for people dealing with inspections
- standards against which plant should be inspected
- the frequency of inspections
- critical safety instructions to be followed during inspection e.g. the isolation procedure
- the procedures for particular types of inspections
- specific tests
- repaired or modified plant, and
- variations from normal operation or dangerous occurrences and any trends that may be occurring.

If maintenance or repair work is required during loading or unloading assess risks associated with the work and eliminate, or if this is not reasonably practicable, minimise these risks so far as is reasonably practicable. The risk assessment should take into account:

- the safety of people who may be affected by maintenance or repair work not just those carrying out this work
- dangerous substances, for example noxious gases, fumes or dust
- noise from the repair work or that workers carrying out repairs will be exposed to, and
- whether the repair work is likely to obstruct, interfere with or distract workers involved in loading or unloading.

7.1 Powered mobile plant

Stevedoring operations include the use of powered mobile plant like mobile cranes, reach stackers, straddle carriers and forklifts.

Regulation 214

The person with management or control of powered mobile plant at a workplace must manage risks to health and safety associated with the following:

- the plant overturning
- things falling on the operator of the plant
- the operator being ejected from the plant, and
- the plant colliding with any person or thing
- mechanical failure of pressurised elements of plant that may release fluids that pose a risk to health and safety.



7. PLANT AND EQUIPMENT

Heavy waterfront machinery can be killers. Their operation must be managed.

This section should be used as a guide to requirements for maintenance and inspection of plant and be read in conjunction with the WHS Regulations.

Code of Practice: *Managing risks of plant in the workplace* applies to wharfies as well.

[https://www.safeworkaustralia.gov.au/resources_publications/model-codes-of-practice]

7.1 Powered mobile plant

WHS Regulation 214 is referenced and should be strictly applied.

Inspect every crane and ensure certificates are in order for ships' cranes.

Consideration of load bearing ability of work area – crane + gear + load.

7. PLANT AND EQUIPMENT

7.2 Cranes

Inspections, tests and preventative maintenance must be carried out according to the manufacturer's instructions or those of a competent person to control the risk of structural or mechanical failure, collapse and decreased safety in crane operations.

Lifting procedures should be developed to help define roles and responsibilities and ensure the crane operation is approached in a systematic way, particularly in the following situations:

- heavy lifts
- lifting work boxes, and
- tandem or dual lifts.

Procedures should be implemented to enable workers to report signs of damage or defect associated with the crane.

TANDEM OR DUAL LIFTS

Regulation 219(7)

The person with management or control of plant at a workplace must ensure, so far as is reasonably practicable, that no load is lifted simultaneously by more than 1 item of plant unless the method of lifting ensures that the load placed on each item of plant does not exceed the design capacity of the plant.

Lifting a load with two or more cranes requires more detailed planning and supervision to control the risks. This is because the effects of the relative movement between the cranes may create extra loading on the cranes, the load and the lifting gear. Further information is in the [General Guide for Cranes](#).

7.2.1 Ship-based cranes

A pre-operational inspection should be carried out for ship based cranes to check:

- crane brakes, limiting devices and emergency controls are fully operational
- for obstructions impairing safe operation e.g. oil, debris or structures like cable trench, rollers and rail tracks
- the ship's gear register to ensure the gear is in compliance with Marine Orders
- the safety of crane access ladders or stairs including surfaces and lighting, and
- emergency escape provisions are provided and suitable.

For rail-mounted cranes, inspections should include ensuring:

- track wheels at deck level are fitted with foot guards
- collision prevention devices are fitted where more than one crane is located on the same track, and
- locking devices on overside extensions are engaged.

Information on monitoring cargo operations during loading and unloading is in section 6.3.



7.2 Cranes

It is particularly important for maintenance workers to be completely across the manufacturers requirements for servicing and these topics should be made a regular part of WHS committee meetings.

The General Guide for Cranes can be found here and utilised on the waterfront.

[<https://www.safeworkaustralia.gov.au/system/files/documents/1703/general-guide-for-cranes.pdf>]

7.2.1 Ship-based cranes

Ships cranes are located on floating factories often designed through flag of convenience arrangements to avoid decent standards of safety regulation.

Ships cranes must be inspected as part of the ship inspection process and by the operator themselves.

The ship inspection should include viewing and verifying that the ships register is legitimate for certification and testing of cranes. Regardless of this we should perform our own checks on all ships cranes.

- **If a crane creeps, condemn it.**
- **If a crane fails to stop slewing, jibbing or hoisting, condemn it.**
- **Ship based cranes – secondary means of access/egress.**

**EVERY SAFETY ISSUE IS
A COLLECTIVE ISSUE**

7. PLANT AND EQUIPMENT

7.2.2 Shore-based cranes

The inspection regime for shore-based cranes includes:

- annual inspections
- routine inspections and maintenance, and
- pre-operational inspections.

Further guidance is in the [Guide to inspecting and maintaining cranes](#).

WEATHER CONDITIONS

Adverse weather conditions in which lifting operations may need to be reassessed include:

- high winds
- lightning
- poor visibility due to rain, snow and fog, and
- significant vessel movement.

Crane operators should base their decision to make a lift on the information provided by the crane manufacturer, advice provided by competent people like a rigger or engineer and their experience as a crane operator.

Decisions may include ceasing crane operations if there is a serious risk arising from exposure to an immediate or imminent hazard, for example the possibility of the crane being struck by lightning. Any crane struck by lightning must be thoroughly examined before being returned to service.

Securing devices

Brakes should be maintained in a safe and serviceable condition and able to prevent unpredictable movement in high wind. For example, the crane's slewing brake should be capable of holding the jib stationary, with the maximum SWL suspended at its maximum radius when a maximum in-service wind acts in the most adverse direction.

When high wind speeds are expected, secure cranes in their appropriate out-of-service condition. If this requires the raising or lowering of a jib, have a planned procedure in place to ensure there is adequate time and space to do so. Cranes secured at picket points should be travelled against the wind to the nearest picket position and the storm anchor inserted.

Rail-mounted cranes taken out-of-service in high winds should be secured using securing devices designed for the purpose, for example storm pins or bolts that can be inserted into a socket in the quay surface, rail clamps, wheel scotches and chains.

EMERGENCY PROCEDURES

The workplace where the crane will operate must have an emergency plan with an effective response to evacuate people from the vicinity of the crane in a controlled manner. Section 3.2 has further information about emergency plans.

A reliable and effective means of communication should be established between all workers in the vicinity of the crane to permit and ensure effective evacuation from danger areas.



7.2.2 Shore-based cranes

This section includes Quay cranes and Portainer Cranes. It is detailed and should be followed.

Emergency access/egress at all driver/cabin positions.

General Guidance for working with cranes can be found at the below link from the Safe Work Australia website.

<https://www.safeworkaustralia.gov.au/system/files/documents/1703/general-guide-for-cranes.pdf>

7. PLANT AND EQUIPMENT

Contact numbers for emergency services should be prominently displayed.

Emergency procedures should be communicated to relevant workers and include information about:

- using warning systems and what to do when they sound
- shutting down the crane safely
- evacuating the crane and the area nearby in a controlled way
- accessing and providing first aid treatment, and
- using firefighting and rescue equipment and where to find it.

7.2.3 Crane personnel cradles or work boxes

Regulation **219(1) and (2)**

Regulation **220**

The person with management or control of plant at a workplace must ensure, so far as is reasonably practicable, that the plant used to lift or suspend a person or thing is specifically designed to lift or suspend the load.

Plant not specifically designed to lift or suspend a person

The person with management or control of the plant at a workplace must ensure that:

- the persons are lifted or suspended in a work box that is securely attached to the plant
- the persons in the work box remain substantially within the work box while they are being lifted or suspended
- if there is a risk of a person falling from a height, a safety harness is provided and worn by the person in order to prevent, so far as is reasonably practicable, injury to the person as a result of the fall, and
- means are provided by which the persons being lifted or suspended can safely exit from the plant in the event of a failure in its normal operation.

Crane work boxes or personnel cradles should have:

- the SWL, tare mass, maximum number of occupants and design registration number marked on the work box or personnel cradle
- gates that are inward opening only, self-closing and provided with a latch to prevent unintentional opening
- fall-arrest anchorage points, and
- sides not less than one metre high.

When using a crane work box or personnel cradle the crane should:

- be equipped with a secondary back-up system to prevent the load from falling if the primary lifting device fails
- have a minimum rated capacity of at least twice the total load of the work box or personnel cradle and its contents
- have levers and foot pedals fitted with a constant pressure system that stops the crane's motions when the operator removes pressure from the controls, and



7.2.3 Crane personnel cradles or work boxes

This was another contentious section in the development of the code. It is very detailed and specifically differentiates between the use of a work cage on a Quay crane as opposed to some form of less secure “personnel cradle” devices which may be offered up for use from a ships’ crane or other form of land based crane.

Specific dimensions and requirements for work cages are also included.

People on site trained to use fire fighting and rescue equipment.

NOTES:

7. PLANT AND EQUIPMENT

- if fitted with a free fall facility have the free fall function positively locked out to prevent inadvertent activation.

In addition to the above the service history of the crane work box or personnel cradle should be checked to ensure it has been maintained and is safe to use.

The crane should be fitted with an emergency stop device which:

- removes the energy supply to the crane and brings the crane to a complete stop when activated
- is readily visible and coloured red
- is easily accessible and located so the operator will not be exposed to other hazards when activating the device, and
- locks in the stop position when activated and requires a manual reset.

Further information on emergency stops is in the [*Code of Practice: Managing risks of plant in the workplace*](#).

The braking efficiency of the hoisting drive train should be tested before the first use of a work box or personnel cradle each day by hoisting and holding a load not less than twice the maximum hoisted load of the loaded work box or personnel cradle.

When working from a work box or personnel cradle procedures should be in place to ensure:

- the rated capacity of the work box or personnel cradle is not exceeded
- the work box or personnel cradle is not suspended over people
- the work box or personnel cradle is designed for the task and securely attached to the crane
- the work box or personnel cradle, lifting attachments and records have been inspected by a competent person and deemed safe prior to use
- the work box or personnel cradle is only used to lift workers and materials necessary to carry out the work
- the crane is suitably stabilised while the work box or personnel cradle is used
- the crane is not used to simultaneously raise, lower or suspend another load while the work box or personnel cradle is suspended from it
- the crane operator remains at the controls of the crane
- there is direct visual communication or other equally effective method of communication between the crane operator and personnel in work box or personnel cradle
- movements of the work box or personnel cradle are at slow speeds with minimum acceleration and deceleration
- flammable liquids and oxygen and acetylene cylinders are correctly secured and no more than the minimum quantities sufficient to carry out the work are carried
- if flammable liquids or gases are carried a suitable fire extinguisher is also carried
- workers are attached to the anchorage by a lanyard and harness unless the work box or personnel cradle is fully enclosed
- the work box or personnel cradle is not used in high winds or other adverse weather conditions, like electrical storms, which could affect the safety of workers
- personnel do not enter or leave the work box or personnel cradle when elevated except in an emergency unless:



Plant & equipment

The person with management or control of powered mobile plant at a workplace must manage risks to health and safety associated with the following:

- the plant overturning
- things falling on the operator of the plant
- the operator being ejected from the plant
- the plant colliding with any person or thing
- mechanical failure of pressurised elements of plant that may release fluids that pose a risk to health and safety

Ref: Section 214 WHS Regulations

No personnel cradle to be used with a crane that does not have a secondary braking system.

Work cages and personnel cradles should NEVER be the sole point of access and egress from a hold or space except in an emergency.

7. PLANT AND EQUIPMENT

- a risk analysis shows this means of access is safer than all other alternative means
- the structural adequacy of the landing area has been established and the landing area is clear
- an appropriate work procedure has been developed and implemented for the operation
- where the landing is on the edge of a structure the:
 - maximum gap between the work box or personnel cradle and landing does not exceed 100 mm
 - work box or personnel cradle is secured to a suitable point on the landing, and
 - access and egress does not take place unless a fall arrest harness is properly worn and attached to a suitable anchorage on the structure.

Information on crane work boxes is provided in the Information Sheet: Crane-lifted work boxes and the [*Code of Practice: Managing the risks of falls at workplaces*](#).

7.3 Other lifting equipment

Lifting equipment like spreaders, slings and hooks used on shore and on board vessels to raise, suspend and lower loads should be well maintained and regularly inspected and tested. Shipboard cranes maintenance records should be checked and any issues with the lifting equipment corrected before they are used.

LOOSE GEAR FOR LIFTING

Ensure that the lifting equipment like spreader bars and beams, slings, chains and hooks is:

- in serviceable condition
- suitable for the task and of adequate capacity for the load being lifted with an appropriate safety factor, and
- appropriately certified.

Developing a lifting plan which documents the control measures may assist in minimising the risk of incorrect equipment or methods being used. A rigging chart may be developed to ensure appropriate lifting techniques are used with the safest lift angles. Consider all securing methods, for example single or double wrap and chains. Specific lifting or slinging methods may be necessary to eliminate or minimise the risk of a load slipping, for example double wrap or single choke with sliding ring. Take into account the condition of equipment, including age and wear.

It is important to check the gear register and certificates relating to lifting gear, but not to rely solely on paperwork as it may be inaccurate or inadequate.

Lifting gear should be inspected by a suitably qualified person, certified and tagged.

Regular visual inspection of lifting equipment should be carried out during operation by a suitably qualified person, for example a rigger. Slings should be protected from sharp edges.



7.3 Other lifting equipment

The code provides the basic requirements for loose lifting gear like slings and hooks.

Slings exposed to seawater (boat lifts etc) must be washed, dried salt is abrasive. All lifting gear should be stored correctly and the highest possible standards of inspection and maintenance adhered to.

Check all gear and certificates are in order.

Only use the correct gear for the lift.

NOTES:

APPENDIX A – KEY TERMS

Access hatch (man-hatch) provides access for people into and out of a hold.

Break bulk means non-containerised cargo transported as individual pieces due to it being oversized and overweight e.g. construction equipment, oil and gas equipment, wind towers and steel.

Bulk means a product not separately packaged but rather is loaded in bulk onto a ship e.g. grain, liquids, iron ore and coal.

Common user means a facility where multiple operators share the same wharf, apron or vessel.

Cargo space for a vessel, means a space intended for the carriage of cargo including a trunkway or hatchway to the space.

Container operations means the loading and unloading of container cargo.

Derrick means a ship's derrick having a boom which may be raised, powered and slewed transversely while supporting a load by means of winches which either form an integral part of the arrangement or are used primarily with it.

Dogging work means work involving either the application of slinging techniques, including the selection and inspection of lifting gear, to safely sling a load; or the directing of a plant operator in the movement of a load when the load is out of the operator's view.

Dogger means someone who carries out dogging work.

Dunnage means loose wood, matting or similar material used to keep a cargo in position in a ship's hold.

Facility means a workplace where stevedoring operations are carried out including common user sites.

General cargo means cargo susceptible for loading in general, non-specialized stowage areas or standard shipping containers e.g. boxes, barrels, bales, crates, packages, bundles and pallets.

Grid means part of a container terminal to which access by road vehicles is permitted in order to deliver and collect containers from container-stacking areas. Also referred to as an interchange area.

Hatch or hatchway mean an opening that provides access to a cargo space for loading or unloading.

Hatch cover means a mechanical device which allow hatches to be opened and closed.

Jersey curbs means a modular concrete barrier.

Lashing secures cargo preventing movement during transport.

Pure car carriers (PCC) means a vessel that transports cars only.

Personnel cradle means a device attached to a lifting appliance or crane for the purpose of lifting people (see also work box).

Roll on/roll off (RoRo) means loading and unloading of cargo via a ramp e.g. cars and bulldozers.

APPENDIX A - KEY TERMS

Safe Working Load (SWL) means the maximum gross load that may be safely lifted by a lifting appliance or item of loose gear in a given condition. Note: SWL may also be called 'rated load' or 'working load limit (WLL)'.

Straddle carrier means a tall, wheeled, frame type of mobile plant, wide enough to move astride a container and lift it by means of a suspended spreader, used for stacking and transferring containers.

Terminal means a maritime container terminal where containerised cargo is moved between different transport mediums for onward transportation. A typical container terminal consists of the water-side berth for docking the ships, a large paved yard for the short-term storage of containers, specialised cranes, tractors and other plant and equipment for handling the containers, and a secured gatehouse to control entry and exit of vehicles and containers.

Twist lock means a standardised rotating connector for securing shipping containers. They are primarily used for locking a container into place on a container ship, semi-trailer truck or railway container train and when lifting containers.

Work box means a personnel carrying device designed to be suspended from a crane to provide a working area for a person elevated by and working from the work box (see also personnel cradle).

Workplace means a place where work is carried out for a business or undertaking. It includes any place where a worker goes, or is likely to be, while at work. A workplace includes:

- a vehicle, vessel, aircraft or other mobile structure, and
- any waters and any installation on land, on the bed of any waters or floating on any waters.

APPENDIX B – EXAMPLE OF MANAGING RISKS IN STEVEDORING

Example:

A general cargo vessel arrives for discharge, the vessel has pre-slung steel pipe in the hatch. The pipe is stacked approximately 6 m high in the hatch.

	What hazards are encountered when doing the task?	What risks do these pose to the health and safety?	How are these hazards and risks controlled?
Handling loads	Suspended loads Broken crane wires Damaged slings Damaged pre-slung wires	Crane – damaged crane wires or slings could cause cargo to fall, causing a serious injury or fatality	An assessment of the lift has been completed and the lift method and equipment has been checked by a competent person Crane has a pre-operational inspection Vessel to have pre-vessel inspection completed The weight of the load is known and less than SWL of the lifting equipment Exclusion zones established to prevent people and forklifts interacting Pre-slung wires, lift certificates are provided Operators of powered lifting devices are trained and competent for the equipment Clear communication methods are maintained between ship and shore personnel
Manual handling	Attaching or detaching cargo to hook	Heavy chains can cause injury when attaching or detaching to crane hook	Manual handling training provided to reinforce safe lifting methods Workers to assist each other when attaching wires and chains to crane hook
Working at heights	Working on top of cargo	Fall from height	Workers must be trained in working at heights procedures Working at heights gear must be checked before use Anchor points are checked to withstand and capable meeting the load

APPENDIX B – EXAMPLE OF MANAGING RISKS IN STEVEDORING

	What hazards are encountered when doing the task?	What risks do these pose to the health and safety?	How are these hazards and risks controlled?
Mobile equipment	Collision mobile equipment and pedestrians	Forklift colliding with workers, causing serious injury or fatality Trucks, moving cargo colliding with workers	Pre-operational checks are completed before equipment is operated Equipment is only operated by licensed and competent personnel Drivers do not use mobile phones or unauthorised electronic equipment whilst driving
Pedestrians	Integration with mobile plant and equipment	Forklift colliding with pedestrians Visitors and contractors on site	Pedestrians must use marked walkaways Exclusion zones implemented on site to prevent pedestrians entering operational areas Traffic management plans developed on site, to ensure that all stakeholders are clear on requirements on site PPE is worn in operational areas

APPENDIX C – EXAMPLE CHECKLIST FOR VESSEL INSPECTION - CONTAINER OPERATIONS

Vessel:

Date and time:

Inspection conducted by:

Vessel representative.....

Terminal representative.....

Inspection areas	Yes	No	N/A	Comments
1. Access and egress				
Gangway in a suitable position, secured and netted				
Gangway kept clear of quay cranes and not impede crane travel				
Gangway signage in place and secure at the wharf side access point				
Gangway kept fully lowered				
Hatchway covers above ladders in place & can be secured				
Handgrips present at top of ladder				
Access hatches are of suitable size to access freely				
Working space is clear of obstructions				
Walkways are in good condition and free of obstructions, with excess lashing gear suitably stacked to remove slip and trip hazards				
Lashing points accessible				
Vertical ladders >3 m have safety hoops—bottom hoop is at least 2 m from the base of the ladder				
Provision of safe access and egress to under deck stows				
2. Edge protection				
Outboard cells are provided with safety rails sufficient to prevent a person falling overboard				
Provision of 2 parallel railings—top and mid-rail—around open hatches and outboard cells including safety chains				
Continuous rails—rope or wire—are taut and in good condition				
Metal stanchions are 1 m in height and no more than 2.5 m apart and secured in position				
3. Housekeeping				
Lifebuoy accessible and visible				
Hazardous substance containers checked for leaks				
Fire and emergency equipment including warning alarms functional and in suitable positions				
4. Lashing and twistlocks				
Lashing gear, unlashings poles, bars, spanners etc are accessible and appear to be in serviceable condition				

APPENDIX C - EXAMPLE CHECKLIST FOR VESSEL INSPECTION - CONTAINER

Inspection areas	Yes	No	N/A	Comments
High lashing bars can be handled using appropriate manual handling technique				
Are lashings and twistlocks of a consistent type and style				
Are twistlocks compatible with plant and equipment				
Bins and racks for stowage of lashing gear are provided and accessible at point of work				
Walkways are clear of excess lashings, loose gear and other trip hazards				
Cell guides in good condition				
Do the 20' containers loaded on deck need to be lashed in the centres				
Does the vessel's container stowage and configuration—20'/40'—cause a change in the lashing and fall protection on the outboard cells regarding protective fencing				
5. Lighting				
Adequate lighting is provided at points of work for lashing and unlashings and cargo operations				
6. Ships gear and cranes				
Inspection and maintenance logs kept and available for wires and lifting gear, only where applicable e.g. chains, slings				
Ships crane stowed to waterside and boom below the top of crane pedestal—only where required				
Slings for pre slung cargo are accessible with SWL displayed				
7. Reefers				
Cables are stowed away clear of walkways and work areas				
Power can be isolated at the board in vicinity to lashing activities				
Reefer cables of import boxes are unplugged & rolled up by crew and placed in storage compartment of container before discharge				
8. Notice of deficiency				
Outstanding Notice of Deficiencies—attach copy				

WHAT THE CODE SAYS

MANAGING RISKS IN STEVEDORING | Code of Practice

APPENDIX D – EXAMPLE CHECKLIST FOR VESSEL INSPECTION - BULK AND GENERAL OPERATIONS

Facility Name:		
Vessel Name:	Date:	Time:
Name of Person Responsible for Inspection:		
Signature:		

Item		Yes	No	Comment						
1	Safe access from wharf to vessel	<input type="checkbox"/>	<input type="checkbox"/>							
2	Safe onboard access, clear alleyways to and from work areas	<input type="checkbox"/>	<input type="checkbox"/>							
3	Safe access to cargo gear operating areas	<input type="checkbox"/>	<input type="checkbox"/>							
4	Safety rails rigged in work areas and lashing platforms	<input type="checkbox"/>	<input type="checkbox"/>							
5	Confirmation ships gear conforms with Marine Orders	<input type="checkbox"/>	<input type="checkbox"/>	<div><div>a) Date last four or five yearly: (Indicate four or five as applicable) Surveying Authority:</div><div>b) Date Last Annual:</div><div>c) Random Gear Item Check</div><div><table><tr><td>Item</td><td>ID</td><td>Sited</td></tr><tr><td></td><td></td><td>Endorsement</td></tr></table></div><div>i) YES NO</div><div>ii) YES NO</div></div>	Item	ID	Sited			Endorsement
Item	ID	Sited								
		Endorsement								
6	Are fire hoses and firefighting equipment on board and ready with international shore connection	<input type="checkbox"/>	<input type="checkbox"/>							
7	Work spaces are adequately ventilated and atmosphere is safe	<input type="checkbox"/>	<input type="checkbox"/>							
8	Information has been provided on hazardous or dangerous goods cargos and confirmation this cargo is intact with no flammable or toxic spillage	<input type="checkbox"/>	<input type="checkbox"/>							
9	Confirmation an adequate mooring watch will be maintained	<input type="checkbox"/>	<input type="checkbox"/>							
10	Confirmation of emergency procedures	<input type="checkbox"/>	<input type="checkbox"/>							
11	Vessel and wharf operational areas adequately lit	<input type="checkbox"/>	<input type="checkbox"/>							
12	Agreement regarding order of load, discharge and cargo placement	<input type="checkbox"/>	<input type="checkbox"/>							
13	Specific advice regarding abnormal stow conditions or special requirements e.g. lashing, tomming off, dunnaging, glutting, securing requirements	<input type="checkbox"/>	<input type="checkbox"/>							

APPENDIX C - EXAMPLE CHECKLIST FOR VESSEL INSPECTION - BULK AND GENERAL

Item		Yes	No	Comment
14	Vessel advised of person responsible for stevedoring operations, contact numbers, structure and allocation of workforce	<input type="checkbox"/>	<input type="checkbox"/>	
15	Start with and maintain a clear and uncluttered wharf face operational area	<input type="checkbox"/>	<input type="checkbox"/>	
16	Confirm machinery to be used onboard and on wharf for practicality and suitability	<input type="checkbox"/>	<input type="checkbox"/>	
17	Stevedoring equipment to be used, with specific consideration given to suitability, condition and SWL of slings and rigs. This includes consideration of ship and shore gear SWL in regard of lifts to be taken	<input type="checkbox"/>	<input type="checkbox"/>	
18	Establish traffic flow patterns to deliver cargo, or remove cargo from the wharf landing area—under hook. Crossing of machinery paths shall be minimised and controlled. Ensure traffics way are clear and unobstructed	<input type="checkbox"/>	<input type="checkbox"/>	
19	Wharf landing area—under hook—prepared with appropriate gluts, landing platforms or safe means by which cargo is positioned before slinging or unslinging	<input type="checkbox"/>	<input type="checkbox"/>	
20	Stevedoring personnel equipped with the skills necessary to carry out the intended operation and fitted out with the appropriate PPE	<input type="checkbox"/>	<input type="checkbox"/>	
21	Stevedoring personnel have a clear understanding of gear and rigs to be used and how cargo is slung or unslung	<input type="checkbox"/>	<input type="checkbox"/>	
22	In the case of bulk cargoes, wharf face personnel will have clear instructions regarding cargo receipt e.g. backing trucks loaded with coal into dump bins before lifting on board or delivery e.g. operating a hopper to load product into a truck	<input type="checkbox"/>	<input type="checkbox"/>	
23	Have wharf face operations been assessed and barricades established separating operational aspects to maintain safe work areas	<input type="checkbox"/>	<input type="checkbox"/>	

CONTACTS – GOVERNMENT



NT

Website: www.worksafe.nt.gov.au
Email: ntworksafe@nt.gov.au
Phone: 1800 019 115



WA

Website: www.commerce.wa.gov.au/worksafe
Email: safety@commerce.wa.gov.au
Phone: 1300 307 877



SA

Website: www.safework.sa.gov.au
Email: help.safework@sa.gov.au
Phone: 1300 365 255



Tasmania

Website: www.worksafe.tas.gov.au
Email: wstinfo@justice.tas.gov.au
Phone: (03) 6166 4600 (outside Tasmania)
or 1300 366 322 (within Tasmania)



NSW

Website: www.safework.nsw.gov.au
Email: contact@safework.nsw.gov.au
Phone: 13 10 50



Queensland

Website: www.worksafe.qld.gov.au
Contact: online enquiry form
Phone: 1300 362 128



Victoria

Website: www.worksafe.vic.gov.au
Email: info@worksafe.vic.gov.au
Phone: 1800 136 089 or (03) 9641 1444



ACT

Website: www.accesscanberra.act.gov.au
Email: worksafe@act.gov.au
Phone: (02) 6207 3000



MUA National Office

Level 2, 365-375 Sussex Street
Sydney, NSW 2000

Tel: 02 9267 9134

Email: muano@mua.org.au

Website: www.mua.org.au



Sydney Branch

Level 1, 365 Sussex Street
Sydney, NSW 2000

Tel: 02 9265 8444

Email: muasyd@mua.org.au

Newcastle Branch

406-408 King Street
Newcastle West, NSW 2302

Tel: 02 4929 2149

Email: muannsw@mua.org.au

Southern NSW Branch

64 Darcy Road
Port Kembla 2505, PO Box 51

Tel: 02 4274 4166

Email: muasthnsw@mua.org.au



Victoria Branch

46-54 Ireland Street
West Melbourne, VIC 3003

Tel: 03 9329 5477

Email: muavic@mua.org.au



Tasmania Branch

Shop 2-4, 57-59 Wright Street
East Devonport, TAS 7310

Tel: 03 6427 8144

PO Box 74E East Devonport
TAS 7310

Email: muatas@mua.org.au



Queensland Branch

73 Southgate Avenue
Southgate Park
Cannon Hill, QLD 4170

Tel: 07 3395 7215

Email: muaqld@mua.org.au



Northern Territory Branch

Stokes Hill Wharf
GPO Box 1174

Darwin NT 0801

Tel: 08 8981 2135

Mobile: 0437 650 221

Email: thomas.mayor@mua.org.au



Western Australia Branch

Level 2, 2-4 Kwong Alley
North Fremantle, WA 6159

Tel: 08 9335 0500

Email: muawa@mua.org.au

Karratha Office
18 Treetop Crescent
Nickol WA 6714
Tel: 08 9185 2059




South Australia Branch

65 Vincent Street
Port Adelaide, SA 5015

Tel: 08 8447 1779

Email: muasa@mua.org.au

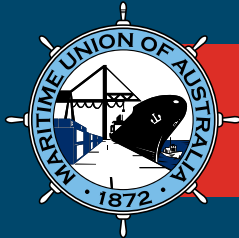

**AN INJURY TO ONE
IS AN INJURY TO ALL**